

PUBLIC EXHIBIT 18

Shop

[Oura Help](#) > [Oura App](#) > [App Features](#) > [Sleep](#)

Search

Articles in this section



Blood Oxygen Sensing (SpO2)

The Oura Ring can detect overall blood oxygen saturation levels, and variation in those levels, while you sleep. These measurements show how efficiently your body circulates and absorbs oxygen, making it a useful index of your overall health, as well as indicating possible disturbances in your breathing during the night.

Blood Oxygen Sensing is available for:

- [Gen3](#) and [Oura Ring 4](#) **with active membership**
- [iOS](#)
- [Android](#)

This feature is **not** available on Gen2 or older.

[How Does Blood Oxygen Sensing Work?](#)

[How to Use the Blood Oxygen Sensing Features](#)

[Blood Oxygen Sensing Troubleshooting](#)

[Things to Keep in Mind](#)

[More Information](#)

How Does Blood Oxygen Sensing (SpO2) Work?

The Oura Ring measures peripheral oxygen saturation (SpO2) levels in your blood by sending light from the ring's red and infrared LEDs into your finger while you sleep, and then measuring how much light is reflected. Richly oxygenated blood reflects more red light than infrared light, while poorly oxygenated blood reflects more infrared light than red light.


Your blood oxygen measurements are located on the Oura App's Sleep screen. The **Average Blood Oxygen** reading is the percentage of your blood that contains oxygen. The **Breathing Regularity** graph displays variations in how much oxygen is present in your blood. This is different from **respiratory rate**, which measures how many breaths per minute (BPM) you take. Average Blood Oxygen and Breathing Regularity are measured during ***sleep periods longer than three hours***, but the Oura App only displays the results for the longest sleep period of the day.

Please note that you may see the red LEDs light up whenever your Oura Ring detects that you may be asleep (based on your heart rate, movement, and respiratory rate), including during the day.

How to Use the Blood Oxygen Sensing (SpO2) Features


Average Blood Oxygen and Breathing Regularity are turned on by default. To toggle them on or off:

1. Go to the **≡ menu** in the upper left corner of the Oura App's home screen
2. Select **Blood Oxygen Sensing**
3. Select the toggle next to **Blood Oxygen Sensing**

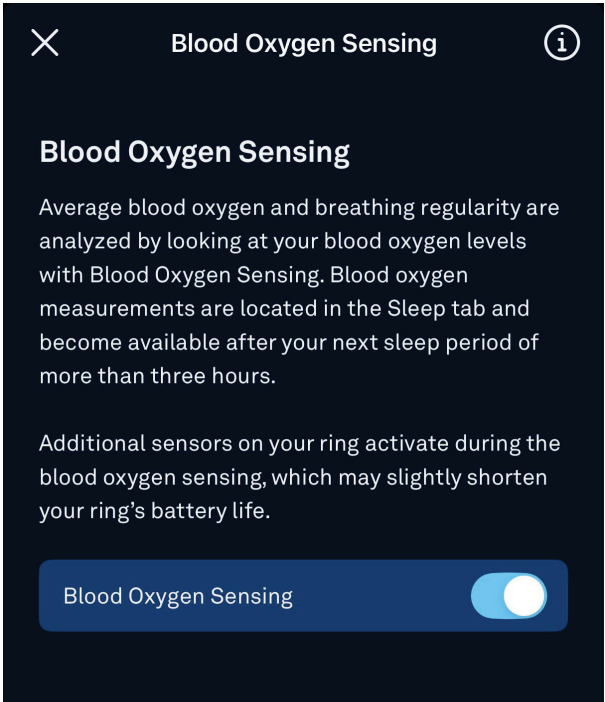

Note: Your ring must be connected to the app over Bluetooth in order to switch the feature on and off.

After your next sleep period of more than three hours, check the Sleep screen. There you will find the **Average Blood Oxygen** percentage and **Breathing Regularity** display.

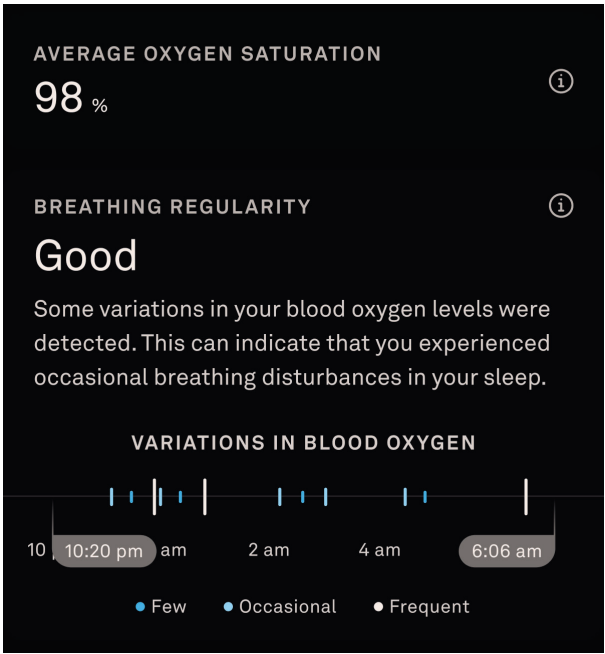

Suspected variations in your blood oxygen levels are shown in a color-coded timeline, indicating sampling intervals of 15 minutes.

Optimal: no significant variations to display

- Good: few variations detected (dark blue line)
- Fair: occasional variations detected (light blue line)
- Pay attention: frequent variations detected (white line)

If your blood oxygen levels are measured as "Optimal" throughout the night, the Oura App will not display a Breathing Regularity timeline. Tap on the information ⓘ icon in the app to learn more about Breathing Regularity, how to improve it, and how to interpret the displayed information.

Blood Oxygen Sensing (SpO2) Troubleshooting

You might see **Average Blood Oxygen** values that are lower than expected for a variety of reasons, including:

- Sleeping in a position that constrains the amount of blood flow to your hand or arm
- Having the ring in the wrong orientation
- Having a too loose or tightly fitting ring
- Excessive movement during sleep

If you are not seeing any blood oxygenation data after a sleep period of three hours or more, try the following:

- Ensure that you have the latest **app software** and **ring firmware** installed
- Charge your ring to at least 30% before going to bed
- Ensure that your ring fits snugly, and that the LED sensors are on the underside (palm-side) of your finger
- Make sure that your ring is not in **Airplane Mode**
- Turn on your device's Bluetooth to enable your ring to sync data with the Oura App

Things to Keep in Mind

High variation in overnight blood oxygen measurements can be a sign that something is challenging your health, such as illness, altitude, or breathing issues.

The Oura Ring is not a medical device and is not intended to diagnose, treat, cure,

monitor, or prevent medical conditions or illnesses. Please do not make any changes to your medication, nutrition, or workouts without first consulting your doctor or another medical professional.

The Blood Oxygen Sensing features use the red and infrared LEDs throughout the night, which impacts your ring's overall battery life. We recommend [turning on low battery notifications](#) as a reminder.

Blood Oxygen Sensing features do not directly impact any your daily scores. However, if something is impacting the variations in Breathing Regularity and Average Blood Oxygen, it may show up in the Sleep and Readiness scores already.

More Information

[Manage Notifications](#)

[An Introduction to Respiratory Rate](#)

[Blood Oxygen Sensing \(SpO2\) on Oura](#)

[10 Ways to Increase Your Blood Oxygen \(SpO2\) Levels](#)

[How We Developed the Blood Oxygen Sensing \(SpO2\) Feature](#)

Was this article helpful?

☐ Yes

☐ No

445 out of 826 found this helpful

[Return to top](#) 

Recently viewed articles

[Nap Detection](#)

[Sleep Stages](#)

[Live Heart Rate](#)

[Product Safety & Use](#)

[Oura Ring 4](#)

Related articles

[Ring Battery Tips](#)

[Oura Ring Generation 3](#)

[Sleep Graphs](#)

[Live Heart Rate](#)

[How to Use the Oura App](#)

Shop

Health Features

Experience

For Organizations

There are no items in your cart

THE PULSE *Blog*



Author: [Oura Team](#) | [October 3, 2024](#)

Oura Ring 4 is our most personal, accurate, and comfortable smart ring yet.

With scientifically validated sensing capabilities, Oura Ring 4 is built around [Smart Sensing](#), a breakthrough technology that adapts to your unique physiology to deliver accurate, continuous data.

Featuring recessed sensors and a fully titanium inner and outer coating, Oura Ring 4 is sleeker and more comfortable than ever to wear all day long, from workout to night out. In keeping with our mission to

BENEFITS BEFORE THE END OF THE YEAR!


HIGH BLOOD PRESSURE IN PREGNANCY: WHAT YOU NEED TO KNOW

6 LIFESTYLE HABITS TO MANAGE BLOOD PRESSURE NATURALLY

WHAT IS HYPERTENSION? SPOT THE SIGNS, LOWER YOUR RISK & PROTECT YOUR HEART

Join the Community

Shop Now

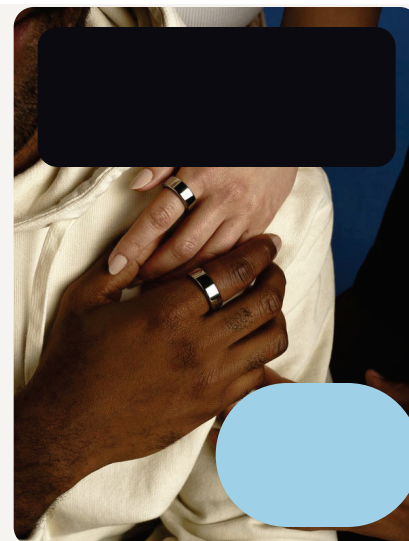

make health a daily practice for every body, Oura Ring 4 is also available in a wider range of sizes—now extending from size 4 to size 15.

~~Sleeker. Smarter. Made for you.~~

[Shop Oura Ring 4](#)

Furthermore, all Oura members with an Oura Ring Gen3 or Oura Ring 4 will experience upgrades to several features, including Daytime Stress, Automatic Activity Detection, and Cycle Insights, as well as a newly [redesigned Oura App](#).

“Oura Ring is designed to be a personal health companion, giving our members a holistic view of their health by pairing personal data with meaningful, actionable insights to facilitate long-term changes,” says Tom Hale, Oura CEO. “The next-generation Oura Ring 4, reimagined Oura App, and the development of the Smart Sensing platform represent significant steps forward for wearables across accuracy, comfort, personalization, and design.”

Oura Ring 4 starts at \$349, with Oura Membership pricing at \$5.99 per month or \$69.99 per year.

Keep reading to learn more.

Oura Ring 4: More Accurate Than Ever Before



Crafted with precision, the [accuracy of Oura Ring](#) has been validated by research institutions across the globe, such as the University of Tokyo and the [National University of Singapore](#). In Oura Ring 4, the new Smart Sensing technology provides an unparalleled degree of accuracy and personalization.

This breakthrough health sensing platform works with the ring's research-grade sensors to learn your unique physiology. The multiple sensors inside the ring form an 18-path multi-wavelength photoplethysmography (PPG) subsystem to provide highly accurate, continuous biometric data, including resting heart rate, [sleep stages](#), [heart rate variability \(HRV\)](#), temperature trends, and more, throughout the day and night.

LEARN MORE: [Smart Sensing: Unparalleled Accuracy and Personalization in Oura Ring 4](#)

A Wearable That's Truly Wearable, Day and Night



Oura Ring 4 is sleeker and more comfortable than its predecessors, allowing it to blend seamlessly into your lifestyle. With a fully titanium coating inside and out, it's gentle to the touch, even on sensitive skin, and slips on and off your finger with ease.

Plus, the powerful health sensors are now recessed, reducing friction and pressure on your fingers when shaking hands or gripping objects. With the lower profile and advancements in comfort of Oura Ring 4, you might even forget you're wearing it—until the compliments start coming.

Choose from Expanded Sizes & Stunning Finishes



Find the right fit for you *and* your personal style. Oura Ring 4 comes in an expanded range of sizes (4-15), the widest size range available on the smart ring market. Select from six gorgeous finishes, including a new, deep black that's more durable than before.

LEARN MORE: [Inside the Ring: The Making of Oura Ring 4](#)

Enjoy Up to 8 Days of Battery Life



Never miss a beat. Oura Ring 4 delivers up to eight days of battery life on just a single charge, and fully charges in up to 120 minutes, depending on current battery level.*

Plus, the charger itself has been redesigned, with an aluminum body and grippy mat on the bottom that provides more stability and improved anchoring as it charges your ring.


Experience a Redesigned Oura App



Currently rolling out to all members, the award-winning Oura App has been redesigned to bring your short- and long-term health into focus, with three new, streamlined tabs: Today, Vitals, and My Health. This easier-to-navigate setup provides an at-a-glance view into your holistic wellness data on a daily basis and trends over time.

READ MORE: [Introducing the New Oura App Design](#)

New Feature Upgrades

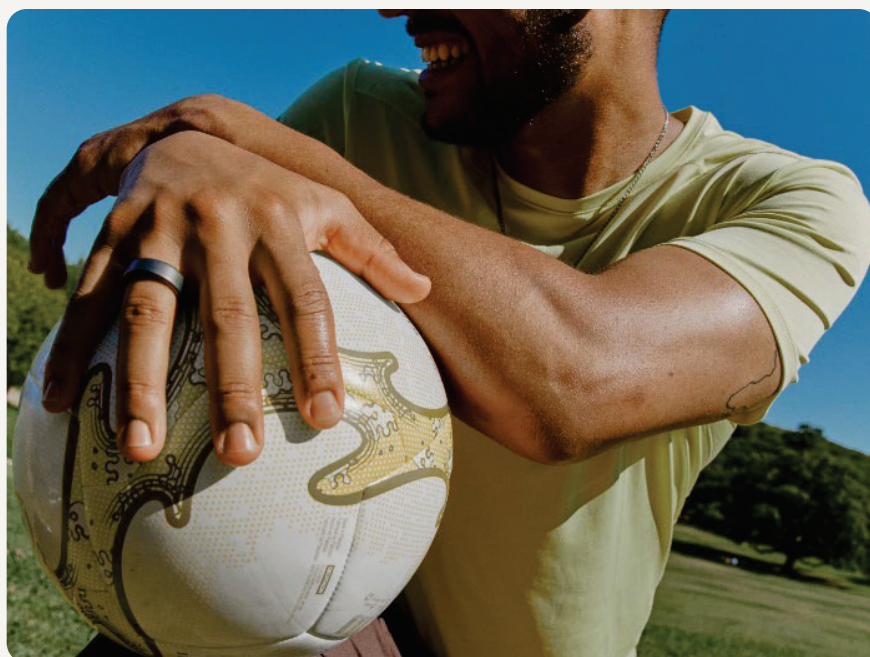

Over time, we've significantly invested in improving our software experience. As of October 3, 2024, new software updates will begin rolling out to both Oura Ring 4 and Gen3 members.

[Automatic Activity Detection \(AAD\)](#) now includes **average heart rate and heart rate zones for 40+ activities**, automatically giving you a more comprehensive view of your movement throughout the day.

Cycle Insights now includes **Fertile Window**, a new feature that gives women who are trying to conceive even more information about their cycle and their fertility journey.

Daytime Stress now provides more context about the relationship between your daytime stress levels and your tags, movement, and activities. This will help you understand how your daily habits affect your stress and your recovery.

Oura Ring 4 vs. Oura Ring Gen3

How does Oura Ring 4 compare to Oura Ring Gen3? The comparison chart below provides specifics, such as the difference in material and design, the sensing platform, and sizing.

In addition, Oura Ring 4 is now capable of storing up to two weeks of data, depending on the type and frequency of use.

Compare Oura Ring Models

Style	 Oura Ring 4	 Oura Ring Gen3
Design & Material	Fully titanium exterior & interior Recessed interior sensors at 0.3mm	Titanium exterior, epoxy interior Raised interior domes (sensors) at 1.3mm
Sensing Platform	Accuracy is powered by Smart Sensing that dynamically selects the optimal signal path	Measurements powered by a fixed, static configuration of optical paths
Battery	Up to 8 days	Up to 7 days
Sizing	Sizes 4-15	Sizes 6-13
Membership Pricing	\$5.99/month	\$5.99/month

**All battery claims depend on Oura Ring size, Oura App settings, feature configuration, activity, age of battery, usage, and many other factors; actual results will vary. Battery life and charge cycles vary by use and settings. Battery tests were conducted across*

various sizes and scenarios. See [Ring Battery tips](#) for more information.

Featured Articles



COMMUNITY
MAXIMIZE YOUR
FSA/HSA
BENEFITS
BEFORE
THE END
OF THE
YEAR!



HEALTH
OURA
CYCLE
INSIGHTS
UPDATE:
FASTER,
MORE
ACCURATE
PERIOD
&
OVULATION
TRACKING



HEALTH
CYCLE
INSIGHTS: KNOW
YOUR
CYCLE
PHASES,
FERTILE
WINDOW
, PERIOD
PREDICTION, AND
MORE



NEWS
OURA
FILES
ITC
ACTION
AGAINST
SAMSUNG,
REEBOK
(REEBOK
SMART
RING),
ZEPP
HEALTH
(AMAZFIT RING),
AND
NEXXBAND
FOR
PATENT
INFRINGEMENT



Instant Checkout



Major Cards Accepted

Receive articles, tips, and offers from Oura

Email Address

We care about protecting your data.

Read more in our [Privacy Policy](#).

We care about protecting your data. Read more in our [Privacy Policy](#).

Our Company

About Us

Leadership

Medical Advisory Board

Careers

Newsroom

Support

Help Center

Sizing

Recycling Program

Flexible Spending

Heart Rate Monitoring

My Account

Oura on the Web

Contact

Partner With Us

For Organizations

Partnerships

Developers

Connect

The Pulse *Blog*

Facebook

Instagram

Pinterest

TikTok

X

YouTube

[Terms & Conditions](#)

[Privacy Policy](#)

[Accessibility](#)


[FCC Compliance](#)

[IP Notice](#)

[Security Center](#)

© 2025 Ōura Health Oy. All Rights Reserved.

ŌURA, OURA, OURA RING, and Ō are trademarks of Oura Health Oy and may not be used without permission.



Shop

Health Features

Experience

For Organizations



Oura Ring 4 Ceramic

THE PULSE *Blog*

BENEFITS BEFORE THE END OF THE YEAR!

HIGH BLOOD PRESSURE IN PREGNANCY: WHAT YOU NEED TO KNOW

6 LIFESTYLE HABITS TO MANAGE BLOOD PRESSURE NATURALLY

WHAT IS HYPERTENSION? SPOT THE SIGNS, LOWER YOUR RISK & PROTECT YOUR HEART



Author: Oura Team | October 3, 2024


Oura Ring 4 is our most personal, accurate, and comfortable smart ring yet.

With scientifically validated sensing capabilities, Oura Ring 4 is built around [Smart Sensing](#), a breakthrough technology that adapts to your unique physiology to deliver accurate, continuous data.

Featuring recessed sensors and a fully titanium inner and outer coating, Oura Ring 4 is sleeker and more comfortable than ever to wear all day long, from workout to night out. In keeping with our mission to

Join the
Community

Shop
Now

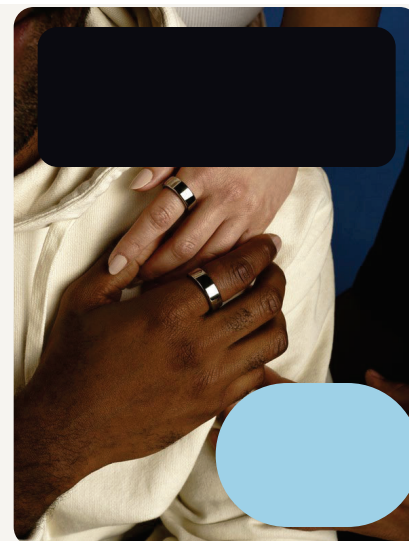

make health a daily practice for every body, Oura Ring 4 is also available in a wider range of sizes—now extending from size 4 to size 15.

~~Sleeker. Smarter. Made for you.~~

[Shop Oura Ring 4](#)

Furthermore, all Oura members with an Oura Ring Gen3 or Oura Ring 4 will experience upgrades to several features, including Daytime Stress, Automatic Activity Detection, and Cycle Insights, as well as a newly [redesigned Oura App](#).

“Oura Ring is designed to be a personal health companion, giving our members a holistic view of their health by pairing personal data with meaningful, actionable insights to facilitate long-term changes,” says Tom Hale, Oura CEO. “The next-generation Oura Ring 4, reimagined Oura App, and the development of the Smart Sensing platform represent significant steps forward for wearables across accuracy, comfort, personalization, and design.”

Oura Ring 4 starts at \$349, with Oura Membership pricing at \$5.99 per month or \$69.99 per year.

Keep reading to learn more.

Oura Ring 4: More Accurate Than Ever Before



Crafted with precision, the [accuracy of Oura Ring](#) has been validated by research institutions across the globe, such as the University of Tokyo and the [National University of Singapore](#). In Oura Ring 4, the new Smart Sensing technology provides an unparalleled degree of accuracy and personalization.

This breakthrough health sensing platform works with the ring's research-grade sensors to learn your unique physiology. The multiple sensors inside the ring form an 18-path multi-wavelength photoplethysmography (PPG) subsystem to provide highly accurate, continuous biometric data, including resting heart rate, [sleep stages](#), [heart rate variability \(HRV\)](#), temperature trends, and more, throughout the day and night.

LEARN MORE: [Smart Sensing: Unparalleled Accuracy and Personalization in Oura Ring 4](#)

A Wearable That's Truly Wearable, Day and Night



Oura Ring 4 is sleeker and more comfortable than its predecessors, allowing it to blend seamlessly into your lifestyle. With a fully titanium coating inside and out, it's gentle to the touch, even on sensitive skin, and slips on and off your finger with ease.

Plus, the powerful health sensors are now recessed, reducing friction and pressure on your fingers when shaking hands or gripping objects. With the lower profile and advancements in comfort of Oura Ring 4, you might even forget you're wearing it—until the compliments start coming.

Choose from Expanded Sizes & Stunning Finishes



Find the right fit for you *and* your personal style. Oura Ring 4 comes in an expanded range of sizes (4-15), the widest size range available on the smart ring market. Select from six gorgeous finishes, including a new, deep black that's more durable than before.

LEARN MORE: [Inside the Ring: The Making of Oura Ring 4](#)

Enjoy Up to 8 Days of Battery Life



Never miss a beat. Oura Ring 4 delivers up to eight days of battery life on just a single charge, and fully charges in up to 120 minutes, depending on current battery level.*

Plus, the charger itself has been redesigned, with an aluminum body and grippy mat on the bottom that provides more stability and improved anchoring as it charges your ring.

Experience a Redesigned Oura App



Currently rolling out to all members, the award-winning Oura App has been redesigned to bring your short- and long-term health into focus, with three new, streamlined tabs: Today, Vitals, and My Health. This easier-to-navigate setup provides an at-a-glance view into your holistic wellness data on a daily basis and trends over time.

READ MORE: [Introducing the New Oura App Design](#)

New Feature Upgrades



Over time, we've significantly invested in improving our software experience. As of October 3, 2024, new software updates will begin rolling out to both Oura Ring 4 and Gen3 members.

[Automatic Activity Detection \(AAD\)](#) now includes **average heart rate and heart rate zones for 40+ activities**, automatically giving you a more comprehensive view of your movement throughout the day.

Cycle Insights now includes **Fertile Window**, a new feature that gives women who are trying to conceive even more information about their cycle and their fertility journey.

Daytime Stress now provides more context about the relationship between your daytime stress levels and your tags, movement, and activities. This will help you understand how your daily habits affect your stress and your recovery.

Oura Ring 4 vs. Oura Ring Gen3

How does Oura Ring 4 compare to Oura Ring Gen3? The comparison chart below provides specifics, such as the difference in material and design, the sensing platform, and sizing.

In addition, Oura Ring 4 is now capable of storing up to two weeks of data, depending on the type and frequency of use.

Compare Oura Ring Models

Style	 Oura Ring 4	 Oura Ring Gen3
Design & Material	Fully titanium exterior & interior Recessed interior sensors at 0.3mm	Titanium exterior, epoxy interior Raised interior domes (sensors) at 1.3mm
Sensing Platform	Accuracy is powered by Smart Sensing that dynamically selects the optimal signal path	Measurements powered by a fixed, static configuration of optical paths
Battery	Up to 8 days	Up to 7 days
Sizing	Sizes 4-15	Sizes 6-13
Membership Pricing	\$5.99/month	\$5.99/month

**All battery claims depend on Oura Ring size, Oura App settings, feature configuration, activity, age of battery, usage, and many other factors; actual results will vary. Battery life and charge cycles vary by use and settings. Battery tests were conducted across*

various sizes and scenarios. See [Ring Battery tips](#) for more information.

Featured Articles



COMMUNITY
MAXIMIZE YOUR
FSA/HSA
BENEFITS
BEFORE
THE END
OF THE
YEAR!



HEALTH
OURA
CYCLE
INSIGHTS
UPDATE:
FASTER,
MORE
ACCURATE
PERIOD
&
OVULATION
TRACKING



HEALTH
CYCLE
INSIGHTS: KNOW
YOUR
CYCLE
PHASES,
FERTILE
WINDOW
, PERIOD
PREDICTION, AND
MORE



NEWS
OURA
FILES
ITC
ACTION
AGAINST
SAMSUNG,
REEBOK
(REEBOK
SMART
RING),
ZEPP
HEALTH
(AMAZFIT RING),
AND
NEXXBASSE
(LUNA
RING)
FOR
PATENT
INFRINGEMENT



Instant Checkout



Major Cards Accepted

Receive articles, tips, and offers from Oura

Email Address

We care about protecting your data.

Read more in our [Privacy Policy](#).

We care about protecting your data. Read more in our [Privacy Policy](#).

Our Company

About Us

Leadership

Medical Advisory Board

Careers

Newsroom

Support

Help Center

Sizing

Recycling Program

Flexible Spending

Heart Rate Monitoring

My Account

Oura on the Web

Contact

Partner With Us

For Organizations

Partnerships

Developers

Connect

The Pulse *Blog*

Facebook

Instagram

Pinterest

TikTok

X

YouTube

[Terms & Conditions](#)

[Privacy Policy](#)

[Accessibility](#)


[FCC Compliance](#)

[IP Notice](#)

[Security Center](#)

© 2025 Oura Health Oy. All Rights Reserved.

OURA, OURA, OURA RING, and Õ are trademarks of Oura Health Oy and may not be used without permission.



Cypress PSoC® 6 Microcontrollers

Purpose-Built for the Internet of Things

WWW.CYPRESS.COM/PSOC6



INCREASING DEMANDS FOR THE INTERNET OF THINGS

The IoT is exploding, with more than 30 billion devices projected to be in service by 2020. At the heart of every IoT device lies a mixed-signal embedded system that is taking on an increased amount of data processing, fueled by cloud connectivity. Devices such as door locks, factory machinery, and wearables are becoming smart — sensing, connecting, learning and responding — to make life easier. With connectivity, security becomes critical to protect users from malicious activity. These next-generation IoT devices require increased processing and security without incurring power and cost penalties.

Increased Data Processing

Today's IoT devices are collecting and processing more data than ever. Even wearable devices can contain more than a dozen sensors, including biometric, environmental, and motion sensors. Sensor data is collected and processed in real-time requiring a processor capable of sensor aggregation.



Flexible Connectivity

IoT devices connect to the cloud via various wired and wireless protocols including USB, Bluetooth Low Energy (BLE), Wi-Fi, and LPWAN. Having the flexibility to connect via different connectivity options is essential.

Security

Security and privacy are significant IoT concerns. Users must be confident that their personal data is always protected while their IoT devices are connected to the Internet. Similarly, IoT developers must be able to ensure the authenticity of their products to eliminate counterfeits and perform secure over-the-air updates to keep their products current.




Extended Battery Life

From wearables to remote sensors, more and more IoT devices are running on batteries. Extending the time between battery charges is a key requirement for battery-powered IoT devices.

PSOC[®] 6 MICROCONTROLLERS

Purpose-Built for the Internet of Things

Cypress' PSoC 6 MCU architecture is purpose-built for the IoT, filling the gap between expensive, power-hungry applications processors and low-performance MCUs. The ultra-low power PSoC 6 MCU architecture offers the processing performance needed by IoT devices. Security is built-in, enabling a single-chip solution. PSoC 6 enables engineers to uniquely create innovative, next-generation IoT devices leveraging the unique PSoC fabric with its easy-to-use, software-defined peripherals.

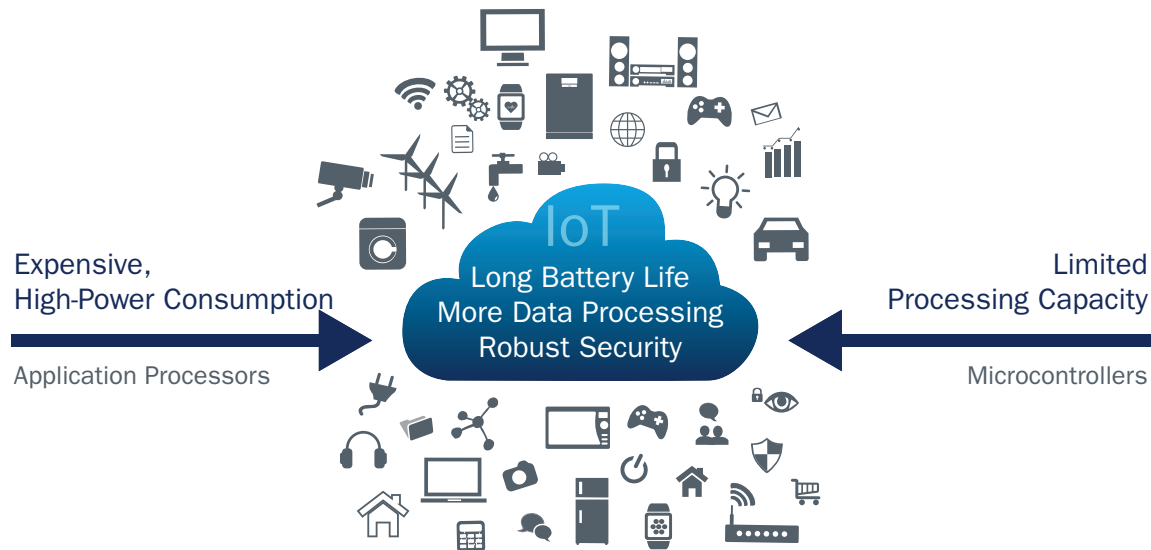

LOWEST POWER

IoT devices are often portable, making battery life a critical factor. The PSoc 6 MCU architecture is built on a cutting-edge, ultra-low-power, 40-nm process technology with a dual Arm® Cortex®-M core architecture. Active power consumption is as low as 22-µA/MHz for the M4 core, and 15-µA/MHz for the M0+ core. PSoc 6 delivers extended battery life without sacrificing performance.



MOST FLEXIBILITY

The rapid growth of the IoT is sparking a need for innovation in IoT products. The PSoC 6 MCU architecture's best-in-class flexibility enables the addition of new features, and addresses the need for unique IoT products with multiple connectivity options, such as USB and BLE. PSoC 6 also offers software-defined peripherals to create custom analog and digital circuits, and the industry's best capacitive-sensing solution, CapSense®. In addition, a flexible dual-core architecture is used to optimize for system power consumption and performance. The possibilities are endless.



BUILT-IN SECURITY

With a growing number of devices connecting to the IoT, security must be established between hardware, cloud applications, and servers, and finally users and services. The PSoC 6 MCU architecture supports multiple, simultaneous secure environments without the need for external memories or secure elements, and offers scalable secure memory for multiple, independent user-defined security policies, preventing your IoT device from becoming a security liability. PSoC 6 provides you with a new standard for IoT security.

UNMATCHED SOLUTIONS FOR THE INTERNET OF THINGS

The Oura Ring

OURA

The Oura Ring is the world's most-advanced wearable that helps you achieve restorative sleep. This innovation is delivered through PSoC 6 MCUs, enabling the following features:

SMALL FORM FACTOR

Integration of several functions into a single PSoC 6 MCU helped reduce the size of the ring over the prior generation by 50%.

DATA STORAGE

PSoC 6's on-chip flash memory enables storage of up to six weeks of user data.

BLUETOOTH LOW ENERGY

The built-in BLE wireless connectivity in PSoC 6 provides communication to the mobile app device.



EXTENDED BATTERY LIFE

PSoC 6's ultra-low power was able to extend battery life to seven days, 3X longer than the prior generation ring.

SENSOR FUSION

PSoC 6, as the host processor, connects different biometric sensors in the ring to collect and process data.



DATA PROCESSING

The dual Cortex-M4 and Cortex-M0+ cores in PSoC 6 enabled 10X more processing capability vs. the prior-generation ring.

"The Oura ring required long-lasting battery life, increased processing capacity, and the use of advanced sensors, all in a stylish and comfortable form factor. Choosing Cypress as our partner helped us meet these requirements and redefine what is possible for wearable health products."


Petteri Lahtela
CEO and Co-founder at Oura Health

For more information on the Oura Ring, please visit: www.ouraring.com

PSoC 6 MCU PORTFOLIO


Value Line	Programmable Line	Performance Line	Connectivity Line	Security Line
PSoC 60	PSoC 61	PSoC 62	PSoC 63	PSoC 64
Arm Cortex-M4 (50 MHz)	Arm Cortex-M4 (150 MHz)	Arm Cortex-M4 (150 MHz) & Cortex-M0+ (100 MHz)	Arm Cortex-M4 (150 MHz) & Cortex-M0+ (100 MHz)	Arm Cortex-M4 (150 MHz) & Cortex-M0+ (100 MHz)
Up to 2MB Flash / 1MB SRAM	Up to 2MB Flash / 1MB SRAM	Up to 2MB Flash / 1MB SRAM	Up to 1MB Flash / 288KB SRAM	Up to 2MB Flash / 1MB SRAM
				Rich Execution Environment Secure Execution Environment Hardware-based Root-of-Trust and Trusted Services
				BLE
				ULP/LP
				CapSense, UDBs, Opamps, Crypto, PDM-PCM
				SCBs, TCPWMs, QSPI, I2S, USB, DMA, SAR ADC, DAC, LCD, LP COMP, RTC, Efuse, PLLs, OSCs, GPIOs, SmartIO

PSoC 6 DUAL-CORE MCU ARCHITECTURE

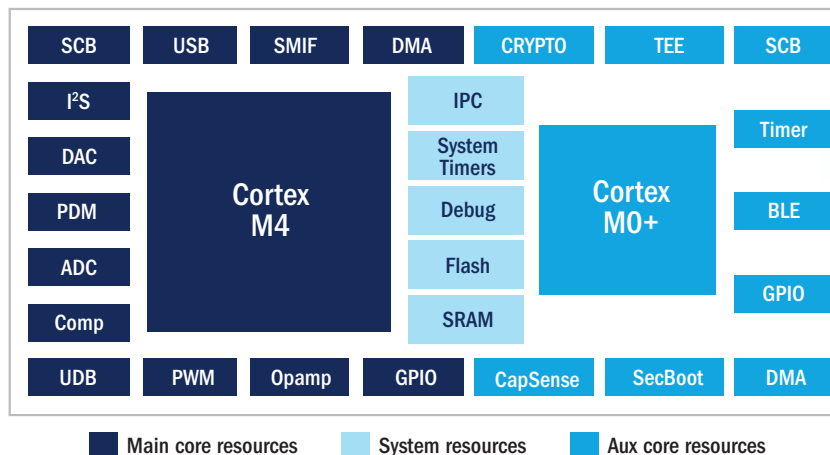

WEARABLE EXAMPLE

Modern wearables incorporate a growing number of functions and capabilities while maximizing battery life. Functions such as sleek user interfaces with sliders and proximity sensors, voice command support, seamless BLE connectivity, display driving, and process-intensive sensor aggregation can all be achieved in a single PSoC 6 MCU without sacrificing battery life.

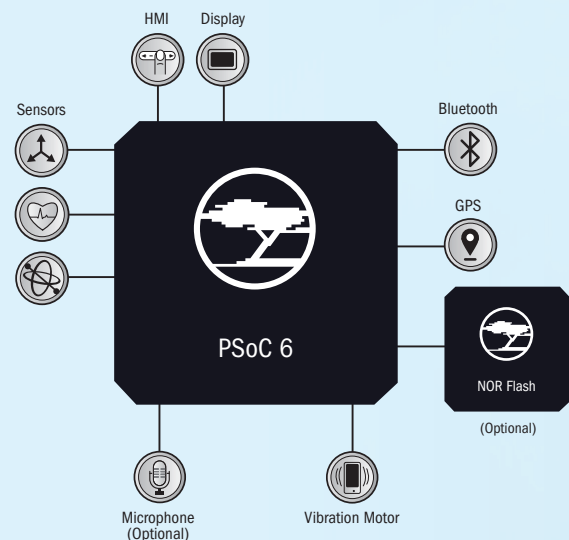

KEY FEATURES



LOW POWER

PSoC 6 was designed for ultra-low power consumption. Starting with the dual-core architecture, the Cortex-M4 core can be put to sleep to conserve power, while monitoring functions can be managed by the Cortex-M0+ core. Dynamic voltage and frequency scaling can be controlled by the user to optimize power for different operating environments. With multiple sleep and hibernate modes, users can fine-tune their power profiles.



BUILT-IN SECURITY

PSoC 6 is designed to provide a hardware-based root of trust for secure applications. A hardware-based root of trust provides extra protection against unauthorized access to keys. In addition, hardware accelerated cryptography and true random-number generation are provided, which are needed for secure boot, authentication, secure over-the-air updates and other functions.



CONNECTIVITY

PSoC 6 supports multiple wired and wireless connectivity options including Bluetooth Low Energy, Wi-Fi, and USB.



CAPSENSE

PSoC 6 leverages Cypress' industry-leading CapSense solution for capacitive sensing with state-of-the-art noise immunity and water rejection used for applications including touch buttons and sliders, proximity detection and liquid-level sensing.



SOFTWARE-DEFINED PERIPHERALS


Cypress' software-defined peripherals can be configured using pre-built library functions or customized using the programmable architecture inside of PSoC 6 devices:

Programmable analog blocks are composed of an assortment of opamps, comparators, ADCs, and DACs, enabling complex analog signal flows.

Programmable digital blocks are composed of Universal Digital Blocks (UDBs), Serial Communication Blocks (SCBs), and Timer / Counter / Pulse Width Modulators (TCPWMs). These blocks can be configured to set-up custom digital interfaces, state machines, and custom logic functions.

VIDEO DOORBELL EXAMPLE

For a smart home application like a video doorbell, PSoC 6, with its dual Cortex-M4 and Cortex-M0+ cores, can transmit real-time video as well as incorporate proximity detection, capture and play audio, and interface to a Cypress fingerprint sensor module or Cypress WICED Wi-Fi chipset. The PSoC 6 MCU's ultra-low-power profile enables smart applications to run off batteries.

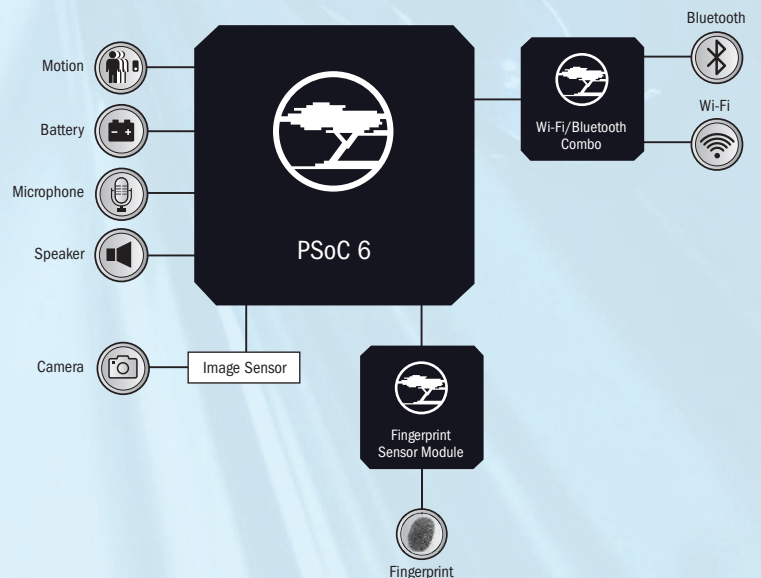

ACCELERATE YOUR NEXT IOT DESIGN CYCLE


ModusToolbox™ Software Environment

ModusToolbox simplifies development for IoT designers, delivering easy-to-use tools and a familiar IDE, with support for Windows®, macOS®, and Linux. It provides a powerful suite of tools for system and peripheral set-up. Code examples, documentation, RTOS and Cloud service support, and technical support forums are available to help your IoT development process along.




Graphical Configuration Tools:

GUI-based configuration tools used to configure peripherals such as Smart I/O, CapSense, and wireless connectivity to quickly design and develop IoT systems.

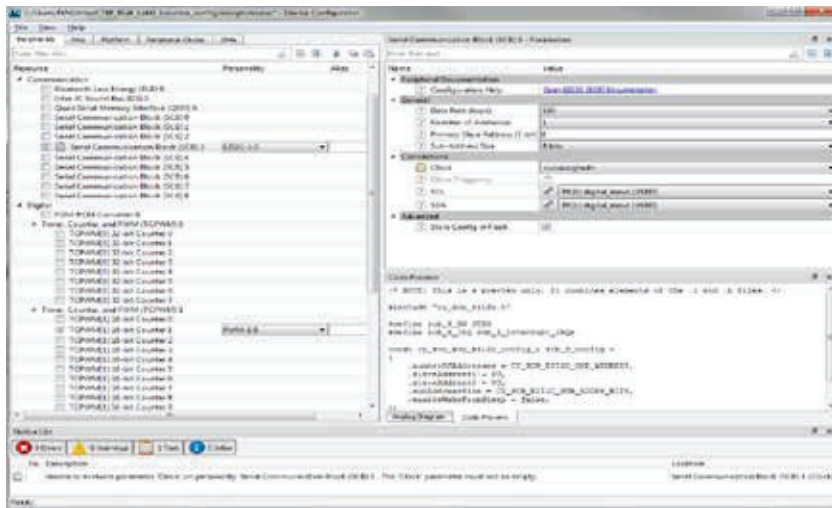

PSoC 6 MCU Peripherals Configurator

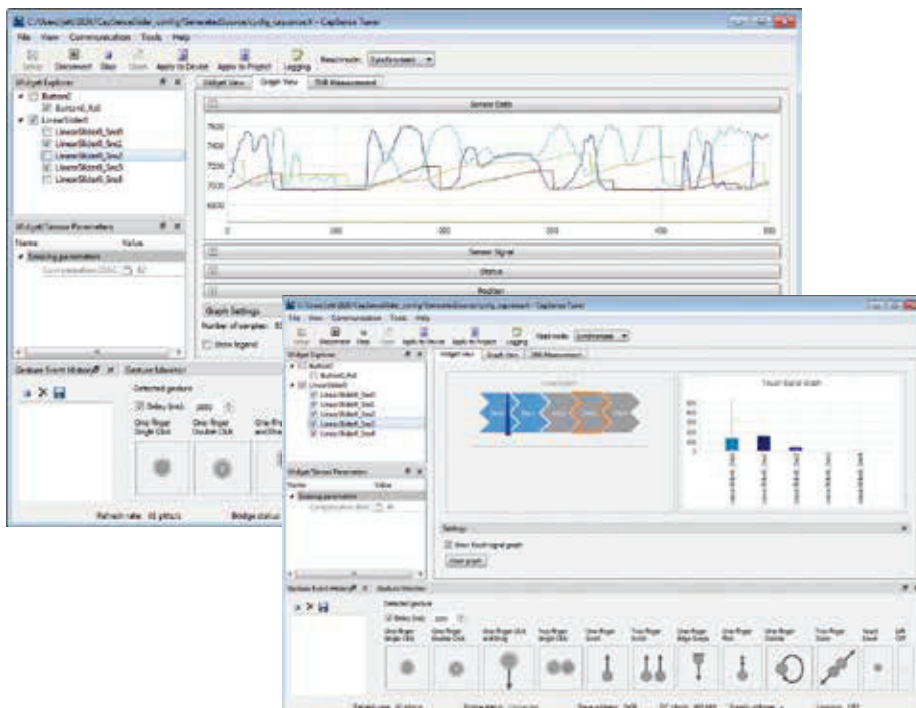


CapSense Configurator Tool

To start designing with the ModusToolbox Software Environment, please visit www.cypress.com/ModusToolbox


PSoC 6 DEVELOPMENT KITS

Cypress offers award winning development kits along with hundreds of code examples allowing you to evaluate, prototype and debug designs with PSoC 6. The PSoC 6 development kits are pin-compatible with various 3rd party expansion boards including Arduino™ shield boards and Digilent® Pmod™ daughter cards.


PSOC 6 WI-FI BT PROTOTYPING KIT
[CY8CPROTO-062-4343W]

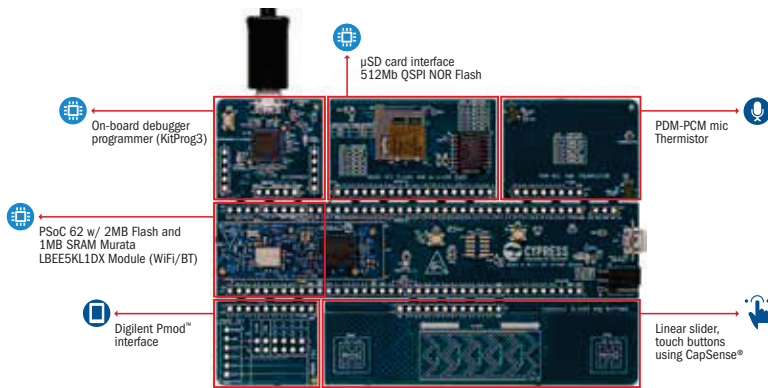



PSOC 6 BLE PROTOTYPING KIT
[CY8CPROTO-063-BLE]

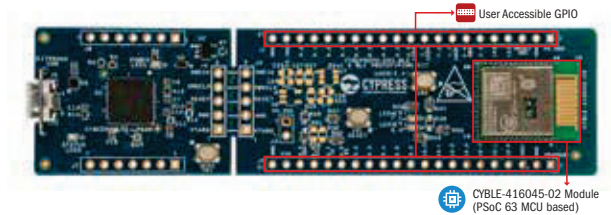



PSOC 64 SECURE BOOT PROTOTYPING KIT
[CY8CPROTO-064-SB]

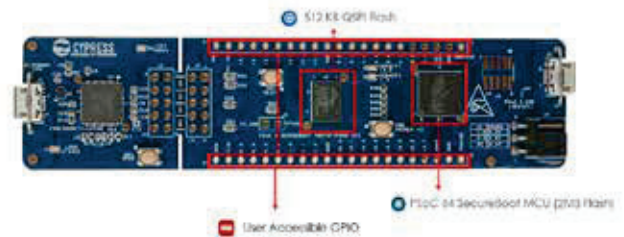

PSOC 6 WIFI-BT PIONEER KIT
[CY8CKIT-062-WIFI-BT]

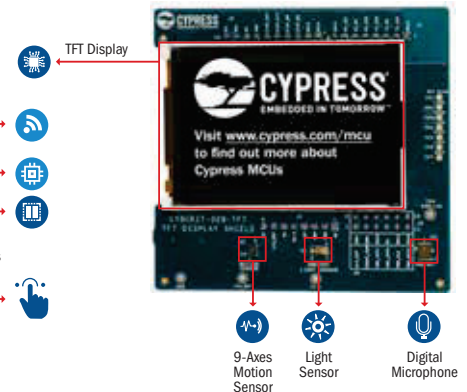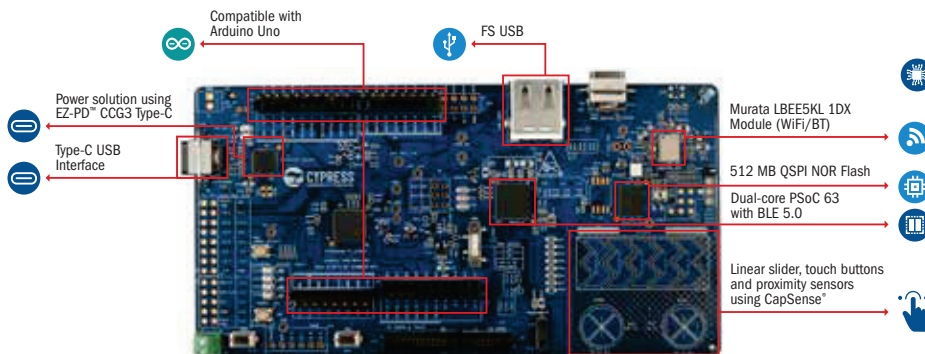

PSOC 6 BLE PIONEER KIT
[CY8CKIT-062-BLE]

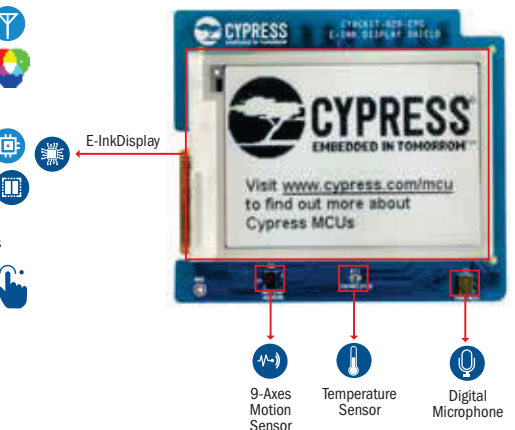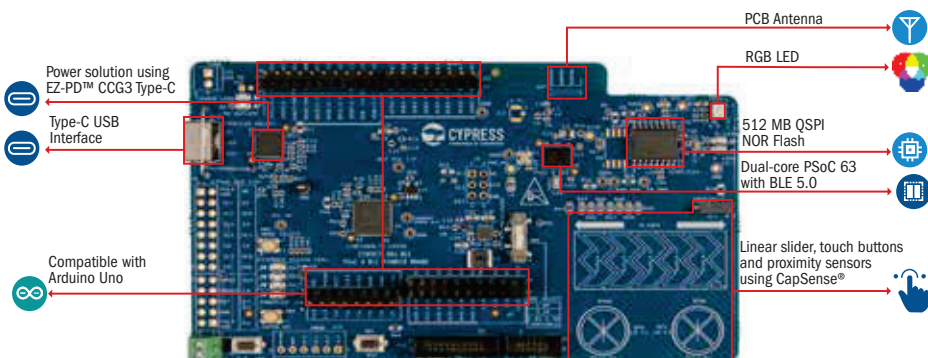

For more information on PSoC 6 kits, go to:
<http://www.cypress.com/microcontrollers-mcus-kits>

SOLVE YOUR IoT PROBLEM HERE

What's your next game-changing application?



Graphic Display



Incorporate a slick graphics display to your next IoT application with the use of the Universal Digital Blocks (programmable logic).




Audio Processing



Digital Microphone



Speaker

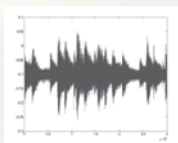

Signal Processing

Add an audio subsystem with an I²S interface and two Pulse Density Modulation (PDM) channels.



Sensor Fusion



Analog Sensors



Digital Sensors

Interface to analog sensors with the programmable analog block functions of PSoC 6, which includes op-amps, comparators, and a 12-bit SAR ADC. Digital sensors can easily be connected via the Serial Communication Blocks (SCBs).

PSoC 63 Connectivity Line

MCU Subsystem

arm

Cortex-M4
with SP FPU
150-MHz

I-Cache 8KB

arm

Cortex-M0+
100-MHz

I-Cache 8KB

SRAM
Up to 1MB

Flash: Up to 2MB


CRYPTO

DMA X2

eFUSE

RTC

Advanced Microcontroller Bus Architecture (AMBA-AHB) and IPC

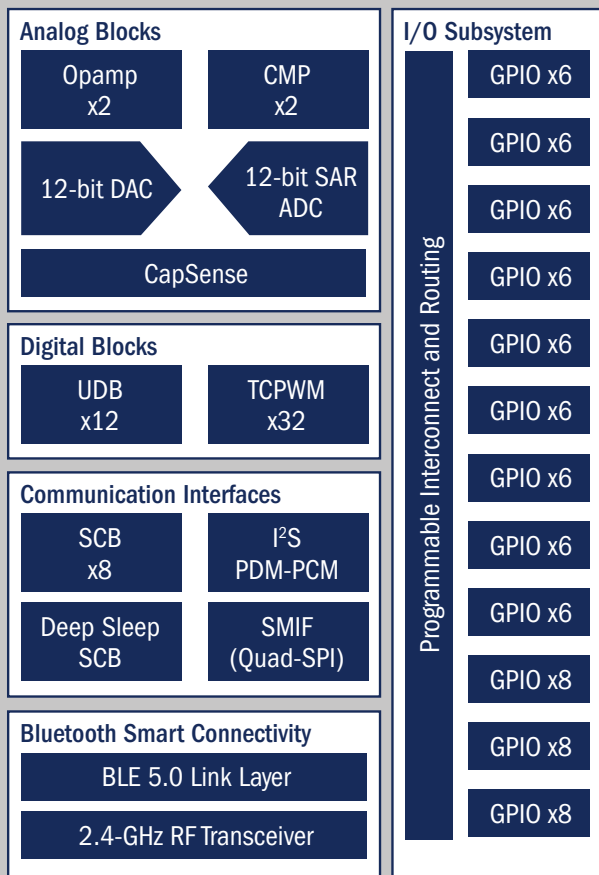

Human Machine Interface



Sliders



Buttons



Proximity



Vibration Motor



Multiple LEDs

Replace traditional buttons with touch, add touch sliders, or add proximity detection with Cypress' CapSense technology. Use the TCPWM to drive motors, actuators or LEDs.



Interface Bridging and Port Expansion



Full-speed USB Host or Device



UART



I²C BUS



SPI

Serial Interfaces

Serial Communication Blocks (SCBs) can be configured to support serial interfaces such as UART, I²C and SPI. USB 2.0 host and device support is available with PSoC 6.



Wireless Connectivity



Bluetooth



Wi-Fi

Add Bluetooth Low Energy connectivity with built-in BLE radio and sub-system. Add Wi-Fi or Bluetooth with Cypress' WICED portfolio.

PSOC®



LOWEST POWER,
MOST FLEXIBILITY,
BUILT-IN SECURITY.

BE A GAME-CHANGER. GET STARTED TODAY.

WWW.CYPRESS.COM/PSOC6

ABOUT CYPRESS

Cypress is the leader in advanced embedded system solutions for the world's most-innovative automotive, industrial, home automation and appliances, consumer electronics and medical products. Cypress' programmable and general-purpose microcontrollers, analog ICs, wireless and USB-based connectivity solutions and reliable, high-performance memories help engineers design differentiated products and get them to market first. To learn more, go to www.cypress.com.



Shop

[Oura Help](#) > [Oura App](#) > [App Features](#) > [Heart Health](#)

Search

Articles in this section



Live Heart Rate

Live Heart Rate lets you track your heart rate in real-time. This feature is available for:

- [Gen3](#) and [Oura Ring 4](#) **with active membership**
- [iOS](#)
- [Android](#)

This feature is **not** available on Gen2 or older.

[What Is Live Heart Rate?](#)

[How to Use Live Heart Rate](#)

[Things to Keep in Mind](#)

[More Information](#)

What Is Live Heart Rate?

With Live Heart Rate, you can check your heart rate at any time during the day. Just tap to see your heart rate instantly. You can access Live Heart Rate through the 24-hour [heart rate graph](#).

Oura uses green LEDs to measure your heart rate in real-time. The process uses photoplethysmography (PPG) technology at a frequency of 50Hz.

PPG technology works by shining a light onto the surface of your skin. When this reaches your blood vessels, some of the light is reflected back onto a photodetector. The intensity of light reflected back captures the amount of blood in your blood vessel via a waveform.

Depending on the color of light used, different biometrics can be captured through their unique waveforms. For example, when your blood vessels are expanded, more green light will be absorbed compared to when they're contracted. This phenomenon allows your pulse to be accurately taken.

To gather an accurate pulse reading, you must remain relatively still for Live Heart Rate to take its full 10-second measurement. If Oura detects too much motion, your Live Heart Rate won't be available.

How to Use Live Heart Rate


1. Go to the Today screen to view your 24-hour heart rate graph. You'll see your most recent heart rate reading along with how recently it was updated.



2. Tap the large heart icon. If the conditions are right (balanced skin temperature, low motion, and a strong Bluetooth connection), it'll begin loading. Stay still for 10 full seconds or until your measurement is complete.



3. Once the reading is complete, your heart rate graph will update with your current heart rate in beats per minute (BPM).

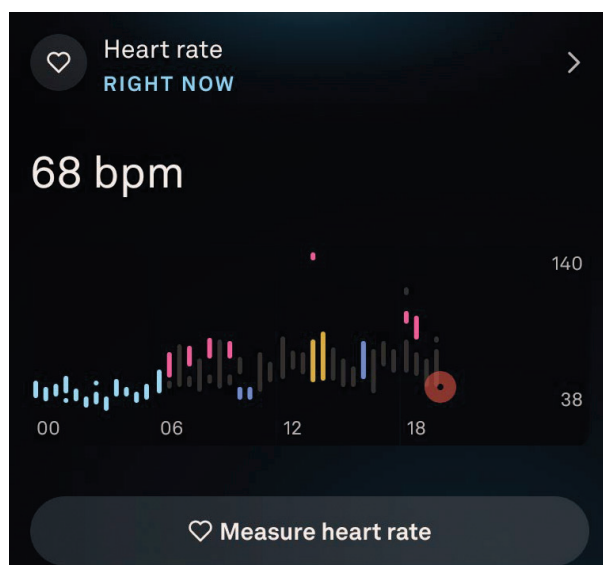

Things to Keep in Mind

- Several variables can interfere with a Live Heart Rate reading:
 - Poor signal quality: check your device's Bluetooth settings to confirm your ring and app are properly connected
 - Low skin temperature: unusually low skin temperature may interfere with readings
 - Excessive movement: make sure you hold still for 10 seconds during your measurement
 - Incorrect ring orientation: make sure your ring's sensors always remain in contact with your skin, on the palm side of your finger

- Live Heart Rate is not the same as [Activity Heart Rate](#), nor is it intended to be a constant heart rate monitor
- The green LEDs used to take your Live Heart Rate are designed for accuracy but require a stronger signal quality. Frequent use of Live Heart Rate will consume more battery, so we recommend charging your ring regularly to keep the battery in its optimal range. You can learn more about [charging best practices here](#).

More Information

[Heart Rate Graph](#)

[Activity Heart Rate](#)

[Ring Battery Tips](#)

[Oura Launches Daytime Heart Rate](#)

Was this article helpful?

☐ Yes

☐ No

552 out of 831 found this helpful

[Return to top](#) 

Recently viewed articles

[Product Safety & Use](#)

[Oura Ring 4](#)

Related articles

[Heart Rate Graph](#)

[Activity Heart Rate](#)

Blood Oxygen Sensing (SpO2)

Known Issues

Cardiovascular Age

Shop

[Oura Help](#) > [Oura App](#) > [App Features](#) > [Sleep](#)

Search

Articles in this section



Nap Detection

The Nap Detection detection feature is available for:

- [Gen2](#)
- [Gen3](#) and [Oura Ring 4](#) with **active membership**
- [iOS](#)
- [Android](#)

[What is Nap Detection?](#)

[How Nap Detection Works](#)

[Things to Keep in Mind](#)

[More Information](#)

What is Nap Detection?

With Nap Detection, Oura users get credit for all accumulated sleep throughout the day and night. For those who regularly nap, or sleep more during the day due to shift-work, polyphasic sleep patterns, new parenthood, etc., Nap Detection will improve sleep tracking accuracy, and account for these sleep periods in Sleep and Readiness Scores.

If your nap is recorded after 6 PM, your Sleep and Readiness Scores won't be updated until the following morning. However, you'll still be able to see all sleep analysis data from

your nap (i.e. sleep stages, RHR, HRV, etc). Once your scores update, they'll also be reflected in on the Sleep and Readiness screens, as well as in your **trends** graphs.

How Nap Detection Works

For Oura to detect sleep as a nap, it must be between 15 minutes and three hours in length, and your body must fall into at least one **sleep stage** (e.g. light, deep, or REM) during that time. It is possible that your time in bed may extend beyond 15 minutes, but changes in your heart rate, movement, and average body temperature do not yet indicate that you've physically entered sleep. Extra movement or an elevated heart rate may also delay detection of a nap. In these cases, a presumed nap may be instead labeled as a rest and shown on the **24-hour heart rate graph** as restorative time (green).

Any sleep picked up by Oura that's longer than three hours will be viewed as your longest sleep period, and added automatically.

Please note: In many cases, the Oura App won't detect a nap if it occurs within four hours of the end of the main sleep cycle. To increase the likelihood of additional sleep being included in your main sleep cycle, we recommend syncing your Oura Ring or placing it on the charger only **after your second wake-up time** (if your nap is within four hours of your first wake-up time).

If a nap at least 15 minutes long is detected, it will be added to the timeline on the Oura App's Today screen and to the Sleep screen. By tapping on the nap, you'll see full sleep analysis of your nap, including your hypnogram, amount of time spent in each stage, as well as your movement, resting heart rate, and heart rate variability graphs. If the nap is inaccurately recorded, you can delete it through this screen to remove its impact on your Sleep and Readiness Scores.

Your nap details will be shown in the app's home, Sleep, and Readiness screens.

Things to Keep in Mind

- The only Sleep and Readiness contributors *not* impacted by naps are Latency (included in your **Sleep Score**), Recovery Index, Activity, and Activity Balance (included in your **Readiness Score**)

- Your Sleep Score may be impacted (positively or negatively) depending on the quality of rest and timing of your nap
- Your Readiness Score may also be lowered if your average body temperature significantly elevates while you nap, as this can be a sign of emerging illness
- Nap Detection data is currently not available via Oura on the Web
- Naps cannot be manually adjusted

More Information

[Sleep Stages](#)

[Sleep Contributors](#)

[Readiness Contributors](#)

[How Does the Oura Ring Track My Sleep?](#)

[Oura's Nap Detection Supports Diverse Sleeping Patterns](#)

Was this article helpful?

☐ Yes

☐ No

1717 out of 2409 found this helpful

[Return to top](#) ☐

Recently viewed articles

[Sleep Stages](#)

[Live Heart Rate](#)

[Product Safety & Use](#)

[Oura Ring 4](#)

Related articles

[Troubleshooting Gaps in Heart Rate Graphs](#)

[Blood Oxygen Sensing \(SpO2\)](#)

[Heart Rate Graph](#)

[Sleep Graphs](#)

[Ring Battery Tips](#)

Shop

[Oura Help](#) > [Oura Ring 4](#) > [Rings](#)

Articles in this section



Oura Ring 4

Oura Ring 4 is the next evolution of the revolutionary smart ring, designed to help you get up close and personal with your health. Oura Ring 4 is built around a breakthrough sensing technology, Smart Sensing, which adapts to your finger to deliver accurate, continuous data, day and night.

- Oura Ring 4 is available through the [Oura online store](#) and various [authorized retailers](#)
- Oura Ring 4 Ceramic:
 - All colors (Midnight, Cloud, Petal, and Tide) are available through the [Oura online store](#) and [Best Buy US](#) and [Best Buy Canada](#)
 - Cloud, Petal, and Tide are available at various [authorized retailers](#)

If you're setting up your Oura Ring 4 as a new or current member, see the instructions in [Set Up an Oura Ring](#).

Also see [Oura Ring 4 FAQs](#).

[Hardware](#)

[Software](#)

[Oura Ring 4 vs. Oura Ring 4 Ceramic](#)

[More Information](#)

Hardware

Oura Ring 4 features a fully titanium design and recessed sensors on the interior, enhancing both durability and wearability. Oura Ring 4 is available in six finishes: Black, Silver, Stealth, Brushed Silver, Gold, and Rose Gold.

Oura Ring 4 Ceramic is made from high-performance zirconia ceramic, a premium material selected for its scratch resistance, luster, and color. Oura Ring 4 Ceramic is available in four colors: Midnight, Cloud, Petal, and Tide.

All Oura Ring 4 models are available in sizes 4-15.

The sizing for Oura Ring 4 is slightly different from Oura Ring Gen3. Make sure to use the right sizing kit for the most accurate fit.

- Oura Ring 4 Sizing Kit: white ring sizers, sizes 4–15
- Oura Ring Gen3 Sizing Kit: black ring sizers, sizes 6–13

For the best fit and most accurate readings, align your ring so that the sensors are against the palm side of your finger.

Sensors

- Smart Sensing is a sensing platform designed to give you the most complete picture of your health. The research-grade sensors work with an algorithm that adapts to the unique structure and skin tone of your finger and your current activity to deliver the most accurate, continuous data, day and night—all while optimizing battery life
- Red and infrared LEDs measure blood oxygen while you sleep
- Green and infrared PPG sensors alternate to measure heart rate 24/7 and heart rate variability and respiration rate during your sleep
- Digital temperature sensor measures average body temperature variations
- Accelerometer tracks movement and activity 24/7

External Surface Materials

- Oura Ring 4:
 - Titanium with physical vapor deposition (PVD) coating in Black, Silver, Brushed

Silver, Gold, and Rose Gold

- Titanium with Diamond-like Carbon (DLC) coating in Stealth
- Oura Ring 4 Ceramic:
 - Zirconia ceramic

Inner Surface Materials

- Non-allergenic, titanium inner shell. This is a medical grade, BPA-free inner surface
- Shock resistance and bonding between printed circuit board and ring outer frame

Connectivity

- Bluetooth Low Energy (Bluetooth Smart®)
- EMF-Safe and allows Airplane Mode
- FCC certified

Other Specifications

- Battery: Typically 5-8 days. Battery life and longevity depend on Oura Ring size, Oura App settings, feature configuration, activity, battery age, usage, and many other factors; actual results will vary. Battery life and charge cycles vary by use and settings. Battery tests were conducted across various sizes and scenarios. See Oura Ring 4 Battery Life and Ring Battery Tips for more information
- Charging time: Typically between 20-80 minutes depending on the ring starting charge level
- Water Resistance: 100m/328ft, suitable for sauna and water sports but not diving
- Operating Temperature: -10–54 °C / 14–129 °F. Charging at room temperature recommended

See more information in our [Product Safety & Use article](#).

Software

Oura Ring 4 with active membership includes:

- [Detailed sleep analysis](#)

- 24/7 heart rate tracking (Daytime, Nighttime, Activity)
- Integration with third-party health and wellness apps like Strava
- Advanced temperature monitoring
- Blood Oxygen Sensing (SpO2)
- Daytime Stress
- Dynamic activity goals with Automatic Activity Detection
- Heart Health (Cardiovascular Age, Cardio Capacity (VO2 Max))
- Metabolic Health (Glucose Tracking, Meals)
- Oura Labs
- Resilience
- Weekly, monthly, quarterly, yearly, and anniversary reports
- Women's Health (Cycle Insights, Pregnancy Insights)

Body clock and chronotype, Explore content, and personalized activity goals are also available for Gen2 and Gen3 rings.

Regardless of the type of membership you have, your Oura Membership will continue to work seamlessly with Oura Ring 4. Since your membership is tied to your Oura account (not the ring itself), all of your data and benefits will carry over. Once you pair your new Oura Ring 4, you'll see all your data in the Oura App.

See [Oura Membership](#) for more information and pricing.

Oura Ring 4 vs. Oura Ring 4 Ceramic

	Oura Ring 4	Oura Ring 4 Ceramic
Design & Material	• Fully titanium exterior • Titanium interior • Recessed interior sensors at 0.3mm	• Ceramic exterior • Titanium interior • Recessed interior sensors at 0.3mm
	• Black • Brushed Silver	• Cloud

Finishes/Colors	• Gold • Silver • Stealth • Rose Gold	• Midnight • Petal • Tide
Sensing Platform	Accuracy is powered by Smart Sensing that dynamically selects the optimal signal path	Accuracy is powered by Smart Sensing that dynamically selects the optimal signal path
Sensors	• Red and infrared LEDs measure blood oxygen levels • Green and infrared LEDs alternate to measure heart rate and heart rate variability 24/7 and respiration rate • Digital sensor measures temperature trends • Accelerometer tracks movement and activity 24/7	• Red and infrared LEDs measure blood oxygen levels • Green and infrared LEDs alternate to measure heart rate and heart rate variability 24/7 and respiration rate • Digital sensor measures temperature trends • Accelerometer tracks movement and activity 24/7
Dimensions	• Width: 7.9mm • Thickness: ~2.88mm • Weight: 3.3-5.2 grams (depending on ring size)	• Width: 7.9mm • Thickness: 3.51mm • Weight: 5.1 - 8.1 grams (depending on ring size)

More Information

Product Safety & Use

[Oura Membership](#)

[Previous Oura Ring Generations](#)

[Oura Ring Finishes](#)

[Ring Battery Tips](#)

Was this article helpful?

☐ Yes

☐ No

1134 out of 1719 found this helpful

Return to top ☐

Recently viewed articles

[Live Heart Rate](#)

[Product Safety & Use](#)

Related articles

[Oura Membership](#)

[How to Choose the Right Oura Ring Size](#)

[Retail Locations](#)

[Ring Battery Tips](#)

[Oura Ring Generation 3](#)

Shop

[Oura Help](#) > [Get Started](#) > [General Information](#)

Articles in this section



Product Safety & Use

This article outlines best practices, key information, and safety information to keep in mind while using your Oura product.

[General Use](#)

[Memory Capacity](#)

[Battery & Charging](#)

[Care & Maintenance](#)

[Ring Stuck?](#)

[Safety Information](#)

[Information on EMF](#)

[Proposition 65](#)

[Sustainability](#)

[PSE Certification \(Japan\)](#)

General Use

You can wear your Oura Ring 24/7. It's built for all-day comfort.

We don't recommend wearing your Oura Ring adjacent to other rings as this may cause discomfort or unintended scratching.

We recommend wearing your Oura Ring on your non-dominant hand. By doing so, you'll limit friction (and scratches to your ring) with items and surfaces you grab and touch each day.

The Oura Ring is water-resistant up to 100 meters (~330 feet), meaning that you can wear it while showering, swimming, or partaking in recreational diving (e.g. *snorkeling*), but we don't recommend using your ring while scuba diving or keeping it submerged underwater for over 12 hours.

Oura Ring operating temperature ranges from -10–52°C / 14–125°F. You can safely wear your ring in the shower, hot tubs, saunas, ice baths, and cryotherapy tanks. However, extended exposure to extreme temperatures (below -20°C / -4°F or above 60°C / 140°F) may lead to battery damage.

For more product specifications, see [Oura Ring 4](#) and [Oura Ring Generation 3](#).

Data Security

Oura employs data encryption, which ensures secure pairing of your ring and app. This means your personal data will be kept fully secure in case an external party ever gets a hold of your ring.

Oura App and Firmware

The Oura App is available on [the App Store](#) and [Google Play](#).

The Oura App is supported on iOS devices running Apple iOS 16 and higher, or Android devices running Android 10 and higher with Google Play services. Your device must support Bluetooth 4.0.

Ring [firmware updates](#) are accessible directly from your Oura App.

Memory Capacity

We recommend you sync your Oura Ring daily with your Oura App. However, the Oura Ring is capable of storing up to one week of data depending on the type and frequency of use. This means that your ring can continue to collect data without syncing to your

device for up to one week. This would apply in the case that you wanted to enable [Airplane Mode](#) for an extended period of time.

Airplane Mode can only be enabled for a maximum of seven days. This is because Airplane Mode is automatically disabled each time your ring is placed back on its charger. Once Airplane Mode is disabled upon this action, a data sync between your ring and app will be initiated upon re-charging. If you'd like to keep Airplane Mode enabled for extended periods of time, you'll still need to charge your ring every few days for optimal battery performance and daily use. Be sure to re-enable Airplane Mode following the completion of charging—instructions on how to do so can be found in [this article](#).

Battery & Charging

Oura Ring has a rechargeable, non-replaceable 15mAh (US6) - 22mAh (US13) Lipo battery.

Charging in room temperature is recommended. Do not use or store the charger in humid environments like bathrooms.

See [Ring Battery Tips](#) and [How to Use Your Oura Charger](#) for more information.

Care & Maintenance

Cleaning Your Oura Ring

To clean your Oura Ring, you can rinse it with a small amount of mild dish soap and water. Remember to thoroughly dry your hands and your Oura Ring before placing it back on your finger.

Hand sanitizer is safe to use with the Oura Ring.

If you're following more stringent hand washing protocols, you can follow the same steps you would with other jewelry and remove your ring while scrubbing your hands to give the ring a separate cleanse.

Tips for Handling and Safety

- Don't leave the ring exposed to heat for extended periods
- Don't puncture the Oura Ring or its battery

Tips for Scratch Prevention

The Oura Ring may get scratched and can itself scratch softer metal jewelry or other objects in close contact with the ring, such as phone covers made of gold, silver, or aluminum. Some ceramic phone covers with a soft coating may also get scratched.

Scratches or other damage caused by wear and tear are not covered by Oura's [warranty policy](#). To help prevent scratches and increase the longevity of your ring:

- Wear your Oura Ring on your non-dominant hand to reduce the amount of contact with various surfaces and objects you interact with on a daily basis
- Avoid wearing other rings adjacent to your Oura Ring. Other rings may scratch your Oura Ring while rubbing against it
- Consider removing your Oura Ring in situations that involve friction (e.g. weightlifting), or when handling objects made of metal, ceramics, or stone (such as handling pots or pans)

The Rose Gold finish is specially designed to be a living color that will develop a darker patina over time. The exact patina effect depends [on the use and care of your ring](#).

Removing a Stuck Ring

Your finger size can vary depending on the time of the day, food and beverage you've recently consumed, rigorous exercise you've recently completed, and changes in altitude. In these cases, it may be difficult to remove the ring from your finger.

In case your ring gets stuck:

- Use cold water and gentle soap to wet your finger, and slowly twist the ring to remove it
- Hold your hand up above your heart until the finger swelling is reduced, and then try to remove it

In cases of emergency, discomfort, or if you can't remove the ring yourself, seek


immediate medical attention.


If a medical professional needs to cut the ring, here is some guidance to consider.

Note: These guidelines are for informational purposes and should only be executed by trained medical professionals with the appropriate tools. An option may be a tool like the Dolphin Cutter, an FDA-registered ring cutter.

Cutting a ring without the proper expertise can cause injury.

1. Orient the ring so the sensors are on the palm side of your finger. For Heritage, the flat plane should be on the top of your finger, and for Horizon and Oura Ring 4, the dimple should be on the palm side of your finger
2. Mark two cut locations on either side of the ring (at 3 & 9 o'clock) with a pen, marker, or tape
3. Rotate the ring to provide access to one of the cut locations
4. Use an appropriate medical-grade ring cutter capable of cutting titanium to make the first cut at the marked location
5. Rotate the ring if needed and cut the other location

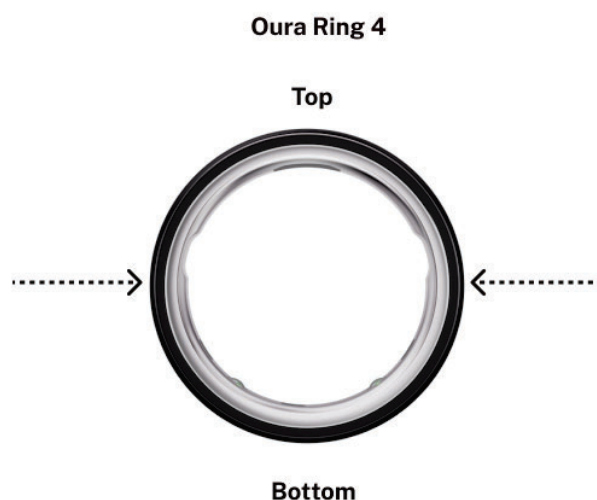

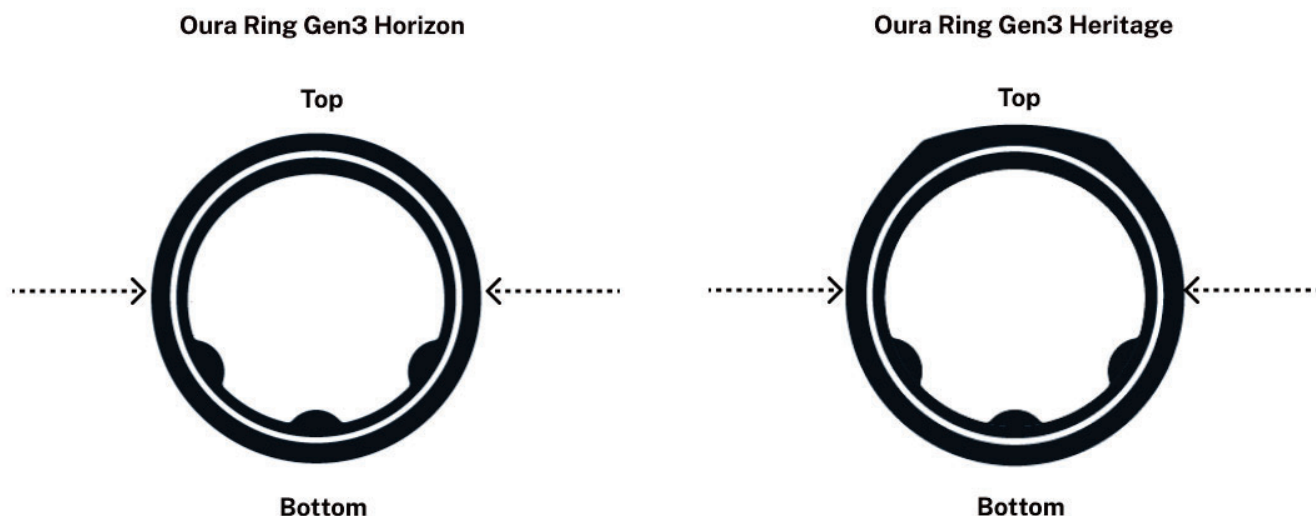

Safety Information

General Safety

Oura products have been through various testing and analysis phases, and we continue to test them for safety.

The Oura Ring is not a medical device and is not intended to diagnose, treat, cure, monitor, or prevent medical conditions or illnesses. Please do not make any changes to your medication, nutrition, or workouts without first consulting your doctor or another medical professional.

Keep the ring away from children. This product is not intended for individuals under the age of 18. Seek immediate medical attention if you know or suspect that a child has swallowed the ring.

If you experience redness or skin irritation on your finger while wearing your Oura Ring, remove it immediately. If symptoms persist longer than 2-3 days, please contact a dermatologist.

Light Emission

The Oura Ring uses infrared (IR), red, and green light-emitting diodes (LEDs). These lights do not generate any appreciable heat or pose a health hazard.

Battery Safety

Avoid handling batteries, or working on devices with machinery that contain batteries, while wearing your Oura Ring. In certain cases, where both the cathode and the anode of another battery touch the ring, there is a risk of a short circuit which is similar to standard metallic rings. This can result in a potentially dangerous shock. Please take the proper precautions to avoid these situations.

Travel and Daily Use

Be cautious when moving heavy objects while wearing your ring to prevent it from getting caught on any fixed structures.

UV light won't affect the ring's materials.

The molding polymer used in the Oura Ring can handle short exposure to acetone.

You can wear the Oura Ring through airport X-ray machines, metal detectors, and scanners.

Information on EMF

The Oura Ring is a Bluetooth Smart®, class 2 device. Bluetooth is only active during a small portion of each day—well below 1%. Data is transmitted continuously when the ring is syncing with the app and during firmware updates.

The limit for Specific Absorption Rate (SAR) for a device like the Oura Ring is 2.0 W/kg for head and body. **The Oura Ring SAR level is 0.0003 W/kg.** For context, all cell phones sold in the United States tend to have a SAR level at or below 1.6 W/kg.

You can always turn on [Airplane Mode](#) if you'd like to eliminate all EMF exposure from your ring.

Proposition 65

Oura Ring 4 Ceramic:

- Based on current information, this product does not require a Proposition 65

warning.

Oura Ring Gen3 and Oura Ring 4:

- **WARNING:** This product may contain chemicals known to the State of California to cause birth defects or other reproductive harm.

For more information on Proposition 65 chemicals, please visit:

<https://www.p65warnings.ca.gov/>

Sustainability

We are being mindful of how we grow in a socially responsible manner. When it comes to what we currently have in place, we take pride in our focus on sustainability in the manufacturing of the Oura Ring. We have done a number of independent carbon footprint reports to measure our production emissions. Additionally, Oura only uses reputable suppliers and vendors who are compliant with local employee laws and social legislation. We have multiple ongoing initiatives within Oura and look forward to sharing more about them in the future.

If you're no longer using an old ring, we ask that you perform a factory reset on it first, and pass it along to a friend or family member if it's still in quality condition. Otherwise, we ask that you recycle it, or dispose of both the ring and internal battery in accordance with your local laws and regulations. Special handling may be required. The charger is an electronic device and local legislation for electronics recycling should be followed.

Read more about our [Device Recycling Program](#).

PSE Certification (Japan)

The Product Safety Electrical Appliance & Material Certification (PSE) certification is a mandatory product approval for electrical products in Japan. However, it only applies to products with removable lithium-ion batteries. Since the battery in the Oura Ring is built-in and not user-removable, this certification is not required.

Oura holds the MIC (Ministry of Internal Affairs and Communications) certification, which is Japan's required approval for products with radio technologies. Both the Oura Ring

and its charger qualify as radio products under Japanese regulations.

Was this article helpful?

☐ Yes

☐ No

9707 out of 10333 found this helpful

Return to top ☐

Recently viewed articles

- Oura Ring 4
- Live Heart Rate

Related articles

- Ring Battery Tips
- Caring for Your Oura Ring
- Troubleshooting Gaps in Heart Rate Graphs
- Troubleshooting Connection Issues
- Transfer Your Oura Data to a New Phone

Shop

[Oura Help](#) > [Oura App](#) > [App Features](#) > [Sleep](#)

Search

Articles in this section



Sleep Stages

Every night, your brain and body experience different phases of sleep, each essential for supporting your mental and physical health. With the Oura App, you can track the quantity and quality of your sleep, note your high points, and identify areas for improvement.

[What Are Sleep Stages?](#)

[How Sleep Stages Are Measured](#)

[Oura's Sleep Staging Algorithm](#)

[More Information](#)

What Are Sleep Stages?

In the Sleep detail view, you'll find color-coded sleep stage data at the top of the screen. Your **sleep stage hypnogram** is also available under the Details section.



The Oura Ring measures four separate stages of sleep:

- **Awake:** the time you spent in bed before and after falling asleep. This also includes **brief awakenings that occur during sleep**
- **REM:** **rapid-eye-movement (REM) sleep** is associated with dreaming, memory consolidation, and creativity. REM sleep is regulated by circadian rhythms and makes up anywhere from 5-50% of your total sleep time. Typically, you get more REM sleep during the latter half of the night
- **Light:** **light sleep** guides you into deeper stages, and acts as the beginning of or transition between each sleep cycle. Light sleep makes up about 50% of total sleep time
- **Deep:** also known as slow-wave sleep, **deep sleep** is when your body repairs and restores itself. During deep sleep, your muscles grow and repair, immune system is refreshed, and brain flushes out toxins. Deep sleep makes up anywhere from 0–35% of your total sleep. Usually, you get more deep sleep during the early night.

Every individual's sleep requirements are different, though the recommended amount is 7-9 hours for most adults. This is enough time for your body to go through four to five 90-

minute sleep cycles. In general, you spend most of the night in light sleep.

Here are some general tips:

- Try to optimize for less awake time and more restorative deep or REM sleep. If you're getting more REM sleep than usual, this may be a sign you're recovering from prolonged sleep deprivation. Check out our blog for [tips on getting more REM sleep](#).
- If you're getting more deep sleep than normal, it could be due to a recent hard workout or changes to improve your sleep quality. See this blog article for [more ways to increase deep sleep](#).
- Remember, light sleep isn't "wasted sleep." Half of your total sleep time is usually made up of light sleep, which is a natural and healthy part of the sleep cycle. Learn more about [light sleep and its benefits](#) on the Pulse Blog.

How Sleep Stages Are Measured

Oura uses data from many of your biosignals — including movement, skin temperature, resting heart rate, heart rate variability (HRV), and respiratory rate — to determine which sleep stage your body is in. Here are some of the indicators that Oura looks for at each stage:

Light sleep:

- Respiratory rate slows
- Heart rate decreases
- Average body temperature drops

Deep sleep:

- Low movement
- Heart rate and respiration stabilize
- Skin temperature is at its highest

REM sleep:

- Respiratory rate increases

- Heart rate increases

Learn more about how Oura measures sleep in this video:



Oura's Sleep Staging Algorithm

Oura's sleep staging algorithm achieved 79% agreement with [polysomnography \(PSG\) sleep lab tests](#).

Find more information about these validation studies and the accuracy of our sleep algorithms on our blog: [Oura's New Sleep Staging Algorithm: More Accurate Than Ever Before](#).

You can export your sleep stage data from the Oura App to Apple Health through our [Apple Health integration](#).

More Information

[What Are the 4 Stages of Sleep?](#)

[Nighttime Movement Feature Displays Your Tossing & Turning](#)

[REM Sleep: What Is It and How to Get More](#)

[Light Sleep: What Is It and What Are the Benefits?](#)

Deep Sleep: What Is It and How to Get More

How Does the Oura Ring Track My Sleep?

What Is a Polysomnography (PSG) Sleep Study?

Oura’s New Sleep Staging Algorithm

Was this article helpful?

☐ Yes

☐ No

365 out of 466 found this helpful

Return to top ☐

Recently viewed articles

Live Heart Rate

Product Safety & Use

Oura Ring 4

Related articles

Sleep Graphs

Sleep Contributors

Troubleshooting Gaps in Heart Rate Graphs

Blood Oxygen Sensing (SpO2)

Edit Bedtime and Wake-Up Time