

EXHIBIT 25

EXHIBIT 25C

Samsung Galaxy Watch4, Watch5, Watch6, Watch7, Watch8, Watch Ultra, and Galaxy Ring Domestic Industry Claim Chart - U.S. Patent No. 10,642,359

	U.S. Patent No. 10,642,359
Independent Claim 1	Samsung Galaxy Watch4, Watch5, Watch6, Watch7, Watch8, Watch Ultra, and Galaxy Ring and Corresponding Applications (collectively, “Domestic Industry Products”)
1[pre] 1. A wearable device comprising:	To the extent that the preamble is limiting, the Domestic Industry Products are a wearable device.



Properly wear and clean your Samsung smart watch

Wear your watch properly



When you want to wear your Samsung smart watch, there's a proper way to put it on, so it will be nice and snug with no discomfort.

First, center the watch on top of your wrist and slide the end of the strap or band through the loop. Then, fit the strap or band to your wrist and firmly insert the pin into the adjustment hole. Ensure the pin is fully inserted into the hole. But make sure not to overtighten the strap or band.

Take necessary precautions if your skin is hypersensitive or if you have an allergy to any materials found in the Galaxy smart watch.

Please also be aware of the following:

- Do not bend the strap or band excessively. Doing so may damage your watch.
- Do not brace your watch against your body or a table.




(<https://www.samsung.com/us/support/answer/ANS10003364/>)

Wear your Galaxy Watch/Fit properly



The following tips will help ensure you are comfortable whilst wearing your device, as well as help you avoid some common causes of skin irritation due to wearing a watch in certain situations.

- Dry your skin before putting on your Galaxy Watch/Fit.
- Tighten the strap enough to keep the device in place and does not slip, but not so tight that it cuts off blood circulation.

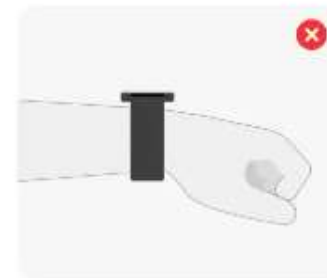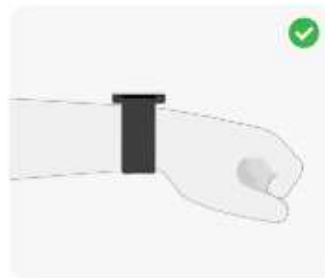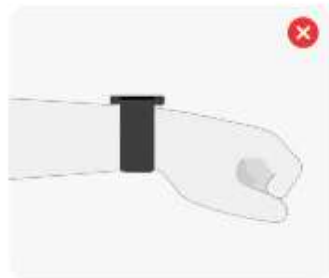

- To avoid skin irritation, remove the device if you have been:
 - Wearing the watch for an extended period of time
 - Sweating
 - Swimming while wearing the Galaxy Watch/Fit

Note: If your skin becomes irritated, stop wearing your device immediately and give your skin two or three days to heal. If your symptoms persist or worsen, contact your doctor.

(<https://www.samsung.com/levant/support/mobile-devices/how-to-correctly-wear-and-maintain-your-galaxy-watch-fit/>)



The latest wearable tech is now here. [Samsung's Galaxy Ring](#) is more than just a fashion statement; it's your gateway to a world of health and fitness tracking. With its ability to monitor vital signs and activity levels, the Samsung smart ring is a powerful way to stay connected to your well-being¹. In this guide, we'll introduce you to the first ever Galaxy Ring and explore its key features and benefits.

1. Compatible smartphone required. Requires Android 11 or above and the latest version of the Samsung Health app.

What is a smart ring?

A smart ring is a wearable technology that combines the convenience of a fitness tracker with the elegance of a piece of jewellery. It offers a discreet way to monitor health metrics like heart rate, sleep patterns, and activity levels. Designed to be both functional and fashionable, smart rings allow you to stay connected to your health goals without compromising on style. With features like sleep and workout tracking, they are not just about looking good; they're about living well.

(<https://www.samsung.com/uk/mobile-phone-buying-guide/introducing-samsung-galaxy-ring/>)

1[a] a motion sensor;

The Domestic Industry Products include a motion sensor that measures motion. For example, the Domestic Industry Products include a motion sensor, such as an accelerometer.

Galaxy Watch8

Galaxy Watch8 | 44mm | Graphite | Sport | Graphite | Medium/Large | 4G LTE + Bluetooth / Wifi | Wifi

Sensors

Sensors

Accelerometer, Barometer, Bioelectrical Impedance
Analysis Sensor, Electrical Heart Sensor, Gyro Sensor,
Geomagnetic Sensor, Infrared Temperature Sensor, Light
Sensor, Optical Heart Rate Sensor


(<https://www.samsung.com/us/watches/galaxy-watch8/buy/galaxy-watch8-44mm-graphite-lte-sku-sm-l335udaaxaa/>)

Steps

The Watch counts the number of steps you have taken.

Measuring your step count

Tap the Health icon (🏃) on the Apps screen and tap **Steps**.

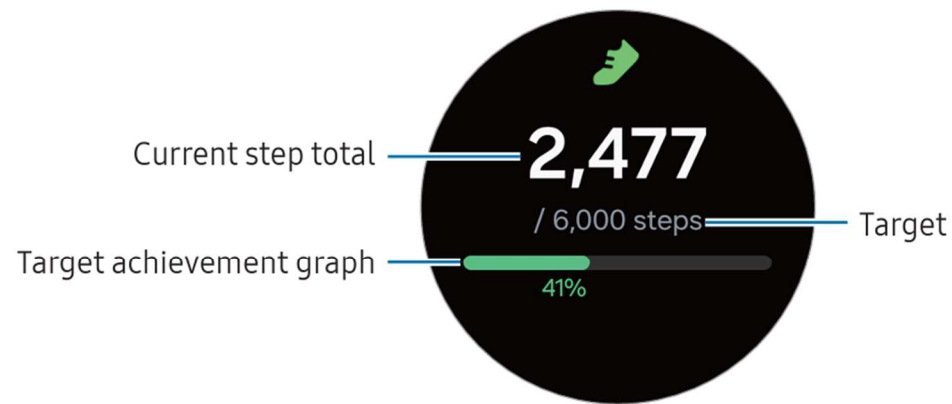

To check additional information which is related to the steps, use the bezel or swipe upwards or downwards on the screen.

(https://downloadcenter.samsung.com/content/UM/202507/20250718174111308/SM-L32X_L33X_L50X_UG_EU_Android_Eng_Rev.1.1_250718.pdf)



The latest wearable tech is now here. [Samsung's Galaxy Ring](#) is more than just a fashion statement; it's your gateway to a world of health and fitness tracking. With its ability to monitor vital signs and activity levels, the Samsung smart ring is a powerful way to stay connected to your well-being¹. In this guide, we'll introduce you to the first ever Galaxy Ring and explore its key features and benefits.

1. Compatible smartphone required. Requires Android 11 or above and the latest version of the Samsung Health app.

What is a smart ring?

A smart ring is a wearable technology that combines the convenience of a fitness tracker with the elegance of a piece of jewellery. It offers a discreet way to monitor health metrics like heart rate, sleep patterns, and activity levels. Designed to be both functional and fashionable, smart rings allow you to stay connected to your health goals without compromising on style. With features like sleep and workout tracking, they are not just about looking good; they're about living well.

[\(https://www.samsung.com/uk/mobile-phone-buying-guide/introducing-samsung-galaxy-ring/\)](https://www.samsung.com/uk/mobile-phone-buying-guide/introducing-samsung-galaxy-ring/)

Sensors

Accelerometer

Yes

PPG

2PD + 3LED (R / 2xG / IR)

Skin temperature

NTC-Temperature Sensor

[\(https://www.samsung.com/us/rings/galaxy-ring/buy/\)](https://www.samsung.com/us/rings/galaxy-ring/buy/)

1[b] a biological sensor; and

The Domestic Industry Products include a biological sensor that measures biological information such as blood oxygen (SpO₂) levels and/or heart rate. For example, the Domestic Industry Products include biological sensors in the form of light emitters and sensors, such as red, green, and infrared (IR) LEDs and sensors.

Galaxy Watch8

Galaxy Watch8 | 44mm | Graphite | Sport | Graphite | Medium/Large | 4G LTE + Bluetooth / Wifi | Wifi

Sensors

Sensors

Accelerometer, Barometer, Bioelectrical Impedance
Analysis Sensor, Electrical Heart Sensor, Gyro Sensor,
Geomagnetic Sensor, Infrared Temperature Sensor, Light
Sensor, Optical Heart Rate Sensor

(<https://www.samsung.com/us/watches/galaxy-watch8/buy/galaxy-watch8-44mm-graphite-lte-sku-sm-l335udaaxaa/>)

Introducing Samsung's New BioActive Sensor

The all-new BioActive Sensor is essential to bringing you better preventative health experiences on the next Galaxy Watch, with design improvements that enable even more precise health insights. Samsung engineers focused on three upgrades to the new sensor: enhancing the performance of light-receiving photodiodes, adding additional colors of light-emitting diodes (LEDs), and arranging them optimally across the sensor.

Samsung more than doubled the performance of each photodiode, successfully decreasing the number needed to maintain capacity from eight to four. This redesign freed up additional space for the integration of a larger number and variety of LEDs and ensured their optimal placement across the sensor. The new sensor now includes Blue, Yellow, Violet, and Ultraviolet LEDs in addition to an increased number of Green, Red, and Infrared LEDs. With the integration and arrangement of these LEDs, and specially designed photodiodes, Samsung is taking innovation one step further and is now able to pursue unexplored aspects of health monitoring on wearables.

(<https://news.samsung.com/us/samsung-new-galaxy-watch-bioactive-sensor-unlocking-new-possibilities-for-preventative-wellness/>)

Measuring your blood oxygen level manually

- 1 Tap the Health icon () on the Apps screen.
 - 2 Tap **Blood oxygen**.
 - 3 Tap **Measure** to begin measuring your blood oxygen level.
- (https://downloadcenter.samsung.com/content/UM/202507/20250718174111308/SM-L32X_L33X_L50X_UG_EU_Android_Eng_Rev.1.1_250718.pdf)

Measuring your heart rate manually

- 1 Tap the Health icon () on the Apps screen.
- 2 Tap **Heart rate**.
- 3 Tap **Measure** to begin measuring your heart rate.
- 4 Check the measured heart rate on the screen.
To check additional information which is related to the heart rate, use the bezel or swipe upwards or downwards on the screen.

Changing the heart rate measurement settings

- 1 Tap the Health icon () on the Apps screen.
- 2 Tap **Heart rate**.
- 3 Tap **Settings** and select the measurement method under **Measurement**.
 - **Measure continuously**: Your heart rate will be measured continuously.
 - **Every 10 mins**: Your heart rate will be measured every 10 minutes while resting.
 - **Manual only**: Your heart rate will be measured manually only when tapping **Measure**.

(https://downloadcenter.samsung.com/content/UM/202507/20250718174111308/SM-L32X_L33X_L50X_UG_EU_Android_Eng_Rev.1.1_250718.pdf)

Samsung Health Monitor

Introduction

You can measure biometric data, such as your blood pressure or ECG, whenever you want to with the Samsung Health Monitor of your Watch that includes both the optical bio-signal sensor and electrical bio-signal sensor. You can check the measurement history using the Samsung Health Monitor app on your connected phone since your Watch and phone have been synced automatically.

Manage your health more systemically with your physician based on your measurement results.



- If you have not installed the Samsung Health Monitor app on your connected phone, open the **Samsung Health Monitor** app on your Watch and follow the on-screen instructions to download it on the phone.
- The Samsung Health Monitor app is only supported on Samsung phones.
- Individuals under the age of 22 cannot use the Samsung Health Monitor app to measure your biometric data.
- This app may not be available depending on the region.

(<https://downloadcenter.samsung.com/content/UM/202507/20250718174111308/SM-L32X L33X L50X UG EU Android Eng Rev.1.1 250718.pdf>)

Sensors

Accelerometer

Yes

PPG

2PD + 3LED (R / 2xG / IR)

Skin temperature

NTC-Temperature Sensor

(<https://www.samsung.com/us/rings/galaxy-ring/buy/>)


Sensors

Accelerometer, Optical Heart Rate
Sensor, Temperature Sensor

(<https://www.samsung.com/uk/rings/galaxy-ring/galaxy-ring-titanium-black-size-10-sm-q500nzkaeub/>)

Checking your heart rate

- 1 On the connected phone, open the **Galaxy Wearable** app.
- 2 Tap **Heart rate**. The relevant screen of the Samsung Health app will appear.
Check the measured heart rate on the screen. To check all heart rate records for today, tap **View all**.

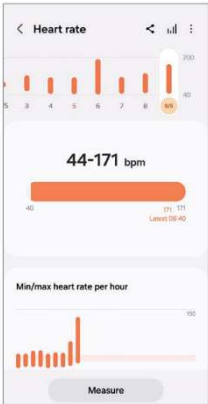

(https://downloadcenter.samsung.com/content/UM/202505/20250508105256703/SM-Q50X_Q51X_UG_EU_Eng_Rev.1.3_250425.pdf)

1[c] a controller configured to:

The Domestic Industry Products include one or more controllers. For example, the Domestic Industry Products include processors, such as a central processing unit (CPU) and/or nRF5340 (Nordic) microcontroller unit (MCU).

Galaxy Watch8

Galaxy Watch8 | 44mm | Graphite | Sport | Graphite | Medium/Large | 4G LTE + Bluetooth / Wifi | Wifi

Processor	
CPU Speed	CPU Type
1.6GHz, 1.5GHz	Penta-Core

(<https://www.samsung.com/us/watches/galaxy-watch8/buy/galaxy-watch8-44mm-graphite-lte-sku-sm-l335udaaxaa/>)

Galaxy Watch8

Galaxy Watch8 | 44mm | Graphite | Sport | Graphite | Medium/Large | 4G LTE + Bluetooth / Wifi | Wifi

Memory (GB)	Storage (GB)	Available Storage (GB)
2	32	20.5

(<https://www.samsung.com/us/watches/galaxy-watch8/buy/galaxy-watch8-44mm-graphite-lte-sku-sm-l335udaaxaa/>)

Powerful inside and out



(<https://www.samsung.com/us/watches/galaxy-watch8/>)

Other Features

MCU

nRF5340 (Nordic)

RAM

512KB + 64KB

Memory

8MB

(<https://www.samsung.com/us/rings/galaxy-ring/buy/>)

Home / Products / nRF5340 SoC

Eng 简体 한글 繁體

nRF5340

System-on-Chip

Dual-core Bluetooth SoC supporting Bluetooth LE, Bluetooth Mesh, NFC, Thread and Zigbee

The nRF5340 is the world's first wireless SoC with two Arm® Cortex®-M33 processors. The combination of two flexible processors, the advanced feature set, and an operating temperature up to 105 °C, makes it the ideal choice for LE Audio, professional lighting, advanced wearables, and other complex IoT applications.

The nRF5340 is an all-in-one SoC, including a superset of the most prominent nRF52® Series features. Features like Bluetooth® LE, high-speed SPI, QSPI, USB, up to 105 °C operating temperature, and more, are combined with more performance, memory and integration, while minimizing current consumption.

The application processor is optimized for performance and can be clocked at either 128 or 64 MHz, using voltage-frequency scaling. It has 1 MB Flash, 512 KB RAM, a floating-point unit (FPU), an 8 KB 2-way associative cache and DSP instruction capabilities. The network processor is clocked at 64 MHz and is optimized for low power and efficiency (101 CoreMark/mA). It has 256 KB Flash and 64 KB RAM.



αQFN94 7x7mm

WLCSP 4.4x4.0 mm

Where to Buy

(<https://www.nordicsemi.com/Products/nRF5340>)

1[c][i] obtain a movement signal of an object using

The Domestic Industry Products obtain a movement signal of an object using the motion sensor, and a biological signal of the object using the biological sensor. For example, the Domestic Industry Products obtain a movement signal of an object such as a human or human body part using a motion sensor that measures motion, such as an accelerometer, and a biological signal

the motion sensor,
and a biological
signal of the object
using the
biological sensor,

of that object, such as blood oxygen (SpO₂) levels and/or heart rate, using a biological sensor, such as a light emitter and sensor, such as red, green, and infrared (IR) LEDs and sensors.

Galaxy Watch8

Galaxy Watch8 | 44mm | Graphite | Sport | Graphite | Medium/Large | 4G LTE + Bluetooth / Wifi | Wifi

Sensors

Sensors

Accelerometer, Barometer, Bioelectrical Impedance
Analysis Sensor, Electrical Heart Sensor, Gyro Sensor,
Geomagnetic Sensor, Infrared Temperature Sensor, Light
Sensor, Optical Heart Rate Sensor


(<https://www.samsung.com/us/watches/galaxy-watch8/buy/galaxy-watch8-44mm-graphite-lte-sku-sm-l335udaaxaa/>)

Steps

The Watch counts the number of steps you have taken.

Measuring your step count

Tap the Health icon (🏃) on the Apps screen and tap **Steps**.

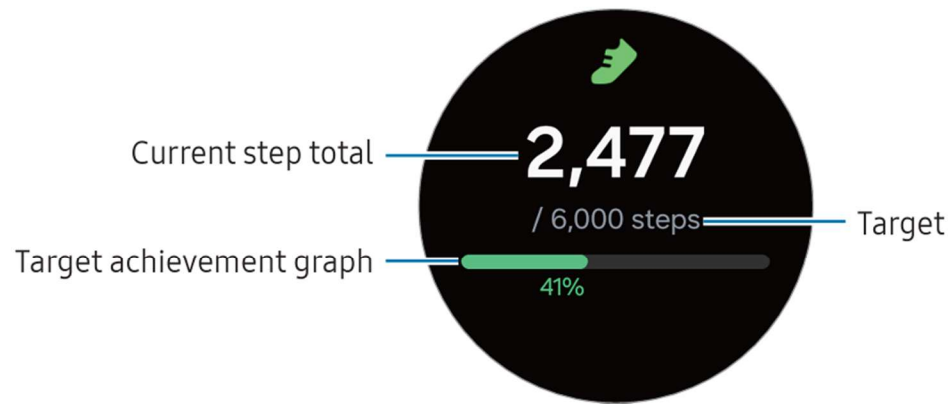

To check additional information which is related to the steps, use the bezel or swipe upwards or downwards on the screen.

(https://downloadcenter.samsung.com/content/UM/202507/20250718174111308/SM-L32X_L33X_L50X_UG_EU_Android_Eng_Rev.1.1_250718.pdf)

Measuring your blood oxygen level manually

- 1 Tap the Health icon (🏃) on the Apps screen.
- 2 Tap **Blood oxygen**.
- 3 Tap **Measure** to begin measuring your blood oxygen level.

(https://downloadcenter.samsung.com/content/UM/202507/20250718174111308/SM-L32X_L33X_L50X_UG_EU_Android_Eng_Rev.1.1_250718.pdf)

Measuring your heart rate manually

- 1 Tap the Health icon () on the Apps screen.
- 2 Tap **Heart rate**.
- 3 Tap **Measure** to begin measuring your heart rate.
- 4 Check the measured heart rate on the screen.
To check additional information which is related to the heart rate, use the bezel or swipe upwards or downwards on the screen.

Changing the heart rate measurement settings

- 1 Tap the Health icon () on the Apps screen.
- 2 Tap **Heart rate**.
- 3 Tap **Settings** and select the measurement method under **Measurement**.
 - **Measure continuously**: Your heart rate will be measured continuously.
 - **Every 10 mins**: Your heart rate will be measured every 10 minutes while resting.
 - **Manual only**: Your heart rate will be measured manually only when tapping **Measure**.

(https://downloadcenter.samsung.com/content/UM/202507/20250718174111308/SM-L32X_L33X_L50X_UG_EU_Android_Eng_Rev.1.1_250718.pdf)

Samsung Health Monitor

Introduction

You can measure biometric data, such as your blood pressure or ECG, whenever you want to with the Samsung Health Monitor of your Watch that includes both the optical bio-signal sensor and electrical bio-signal sensor. You can check the measurement history using the Samsung Health Monitor app on your connected phone since your Watch and phone have been synced automatically.

Manage your health more systemically with your physician based on your measurement results.



- If you have not installed the Samsung Health Monitor app on your connected phone, open the **Samsung Health Monitor** app on your Watch and follow the on-screen instructions to download it on the phone.
- The Samsung Health Monitor app is only supported on Samsung phones.
- Individuals under the age of 22 cannot use the Samsung Health Monitor app to measure your biometric data.
- This app may not be available depending on the region.

(https://downloadcenter.samsung.com/content/UM/202507/20250718174111308/SM-L32X_L33X_L50X_UG_EU_Android_Eng_Rev.1.1_250718.pdf)

DAILY ACTIVITY

**Stay motivated with daily goals**

Automatically measure **steps**, **active calories** and **activity time** with easy-to-read heart trackers. Set your daily goals, get notifications to stay motivated and complete each heart with satisfaction in every step.




(https://www.samsung.com/us/watches/galaxy-watch8/?gad_source=1&gad_campaignid=22026468931&gclid=CjwKCAiAlfvIBhA6EiwAcErpyTxQourKcXdoNy-zISVqjbmXfm-x9LWFiON1OTVnDiFXZD5sc3cUaBoCwsgQAvD_BwE&gclsrc=aw.ds)

Discover your optimal bedtime

BEDTIME GUIDANCE

Galaxy Watch8 uses three days of sleep data to find an optimal bedtime for you.⁴ When it's time to wind down, it gently nudges you according to your personalized sleep schedule.

🕒 How to use Sleep Coaching

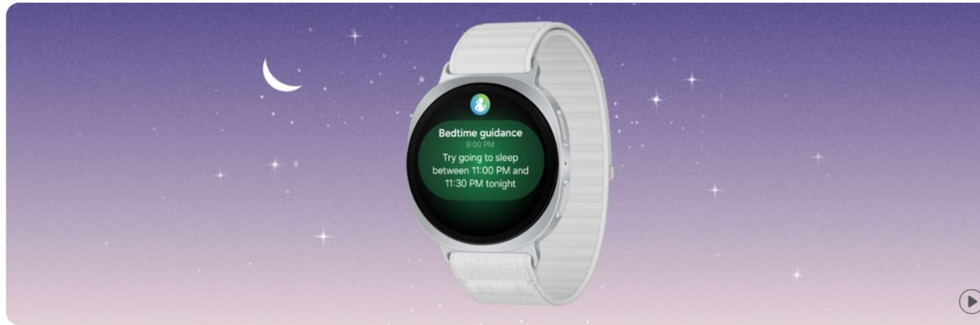

ADVANCED SLEEP TRACKING

Track your nights. Own your days.




ADVANCED SLEEP COACHING

Your coach, day and night



SLEEP APNEA

Detect moderate to severe sleep apnea

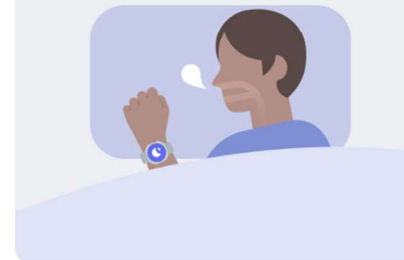

(https://www.samsung.com/us/watches/galaxy-watch8/?gad_source=1&gad_campaignid=22026468931&gclid=CjwKCAiAlfvIBhA6EiwAcErpyTxQourKcXdoNy-zISVqjbmXfm-x9LWFiON1OTVnDiFXZD5sc3cUaBoCwsgQAvD_BwE&gclsrc=aw.ds)

How can I improve my sleep quality?

Galaxy Watch8 tracks every toss, turn and breath of your night. Each morning you get an in-depth sleep analysis based on your sleep stages, heart rate, skin temperature and oxygen level, highlighting what helped or hindered your rest. You can also access a **Sleep Environment Report**³ which leverages data from compatible SmartThings devices to analyze room temperature, humidity, carbon dioxide and light levels. With this data at your fingertips, you can easily optimize your room conditions for a better night's sleep.

What can I do during the day to improve my sleep?

Once your sleep patterns are defined, **Sleep Coaching**⁴ assigns you a Sleep Animal and delivers personalized tips like adding a quick meditation session or skipping late-day caffeine. With Galaxy Watch8, small, daily habit upgrades are easy, and better nights are within reach.

[\(https://news.samsung.com/us/why-samsung-galaxy-watch8-series-is-every-biohacker-new-go-to-tech/\)](https://news.samsung.com/us/why-samsung-galaxy-watch8-series-is-every-biohacker-new-go-to-tech/)

Sensors

Accelerometer

Yes

PPG

2PD + 3LED (R / 2xG / IR)

Skin temperature

NTC-Temperature Sensor

(<https://www.samsung.com/us/rings/galaxy-ring/buy/>)


Activity and Stress Monitor




Activity Monitor

With the Galaxy Ring, after continuously exercising for a certain period, it automatically recognises the activity and starts recording. Your ring collects activity diagnostics such as steps, exercise time, and exercise and total calories burned. All diagnostics can be viewed using the Samsung Health app.

- Set up auto detect:

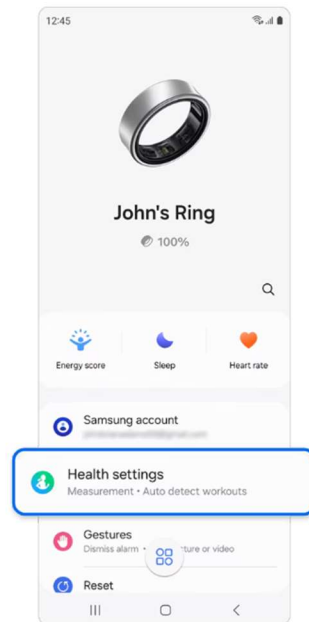

Step 1. Open the Galaxy Wearable app > Tap Health Settings.

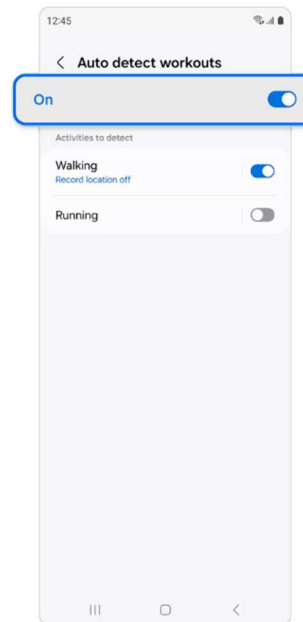


Step 2. Tap Activities to detect > Turn switch On and specify activities that you'd like to auto detect.

(<https://www.samsung.com/ie/support/mobile-devices/how-to-use-the-samsung-galaxy-ring/>)

Sleep


Your Ring analyses your sleep by measuring your heart rate, blood oxygen, skin temperature, and more while you are sleeping.

- Check diagnostics:

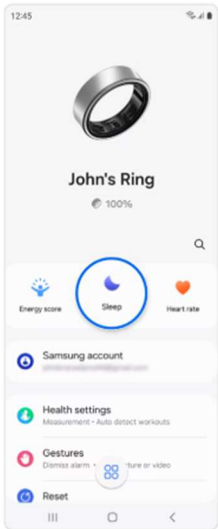

Step 1. Open the Galaxy Wearable app > Tap Sleep > Check all information related to your measured sleep on the screen.

- Sleep measurement settings:

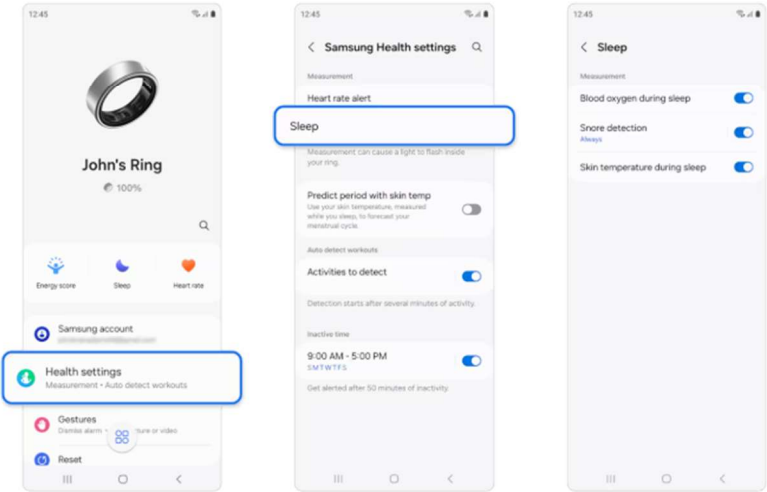


Step 1. Open the Galaxy Wearable app > Tap Health settings.

Step 2. Tap Sleep.

Step 3. Toggle with measurement settings to your preference.

(<https://www.samsung.com/ie/support/mobile-devices/how-to-use-the-samsung-galaxy-ring/>)

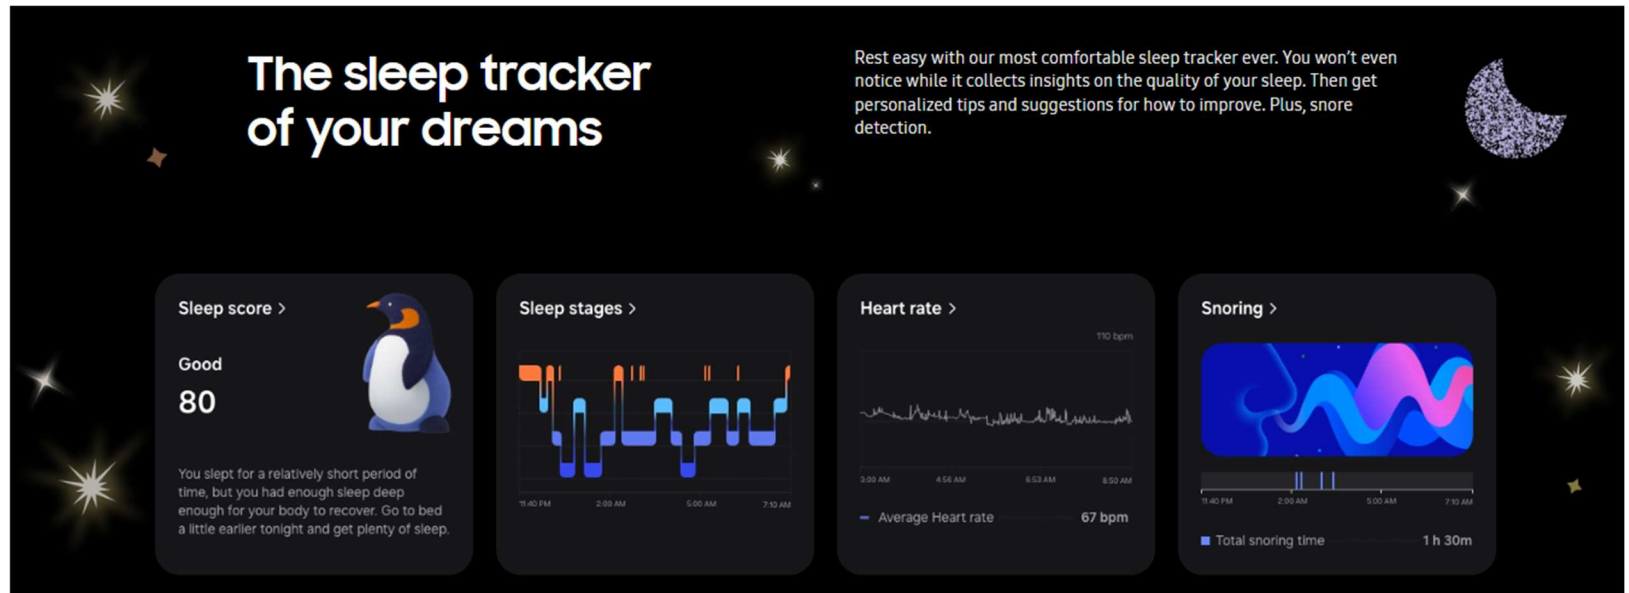

(<https://www.samsung.com/us/rings/galaxy-ring/>)

Galaxy Ring auto-tracks your walks and runs

Simply place it on your finger and Galaxy Ring will take care of the rest. Galaxy Ring **auto-tracks** your walks and runs without having to press any start buttons. Check calories burned and other stats on the Samsung Health app to keep track of your progress. ^{7,22}

Today



Time to get moving!

It's been almost an hour. Try some stretches or a walk



Running (auto)

5.84 km

40:29

7:31 AM




Walking (auto)


2.3 km

31:48

10:22 AM

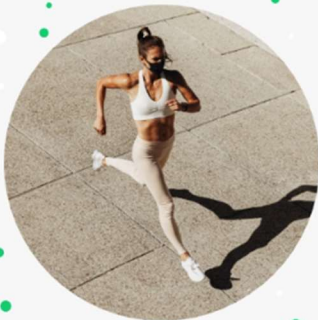

Trends



Details

Distance	Avg. speed
5.34km	9.5 km/h
Calories	Avg. pace
512 kcal	06'15" km
Avg. heart rate	Avg. cadence
119 bpm	168 spm

Achievement



https://www.samsung.com/my/rings/galaxy-ring/galaxy-ring-titanium-gold-size-15-sm-q515nzdaxme/?srsltid=AfmBOoqGJ7KWT08760XUvDmnRUwstq-KSkZpwfdk2IWiwBzJ7Qi_1u-l

1[c][ii] determine, based on an analysis of the

The Domestic Industry Products determine, based on an analysis of the movement signal, whether to perform a specified function of the wearable device using the biological signal. For example, the Domestic Industry Products determine, based on an analysis of the movement detected by an accelerometer, whether to perform a specified function of the wearable device

movement signal, whether to perform a specified function of the wearable device using the biological signal, and

using biological information such as blood oxygen (SpO₂) levels and/or heart rate, where the specified function could include computing, storing, transmitting, and/or displaying sleep-related data or data collected while the user is determined to be asleep.

Galaxy Watch8

Galaxy Watch8 | 44mm | Graphite | Sport | Graphite | Medium/Large | 4G LTE + Bluetooth / Wifi | Wifi

Sensors

Sensors

Accelerometer, Barometer, Bioelectrical Impedance
Analysis Sensor, Electrical Heart Sensor, Gyro Sensor,
Geomagnetic Sensor, Infrared Temperature Sensor, Light
Sensor, Optical Heart Rate Sensor

(<https://www.samsung.com/us/watches/galaxy-watch8/buy/galaxy-watch8-44mm-graphite-lte-sku-sm-l335udaaxaa/>)

Samsung Health Monitor

Introduction


You can measure biometric data, such as your blood pressure or ECG, whenever you want to with the Samsung Health Monitor of your Watch that includes both the optical bio-signal sensor and electrical bio-signal sensor. You can check the measurement history using the Samsung Health Monitor app on your connected phone since your Watch and phone have been synced automatically.

Manage your health more systemically with your physician based on your measurement results.



- If you have not installed the Samsung Health Monitor app on your connected phone, open the **Samsung Health Monitor** app on your Watch and follow the on-screen instructions to download it on the phone.
- The Samsung Health Monitor app is only supported on Samsung phones.
- Individuals under the age of 22 cannot use the Samsung Health Monitor app to measure your biometric data.
- This app may not be available depending on the region.

(https://downloadcenter.samsung.com/content/UM/202507/20250718174111308/SM-L32X_L33X_L50X_UG_EU_Android_Eng_Rev.1.1_250718.pdf)

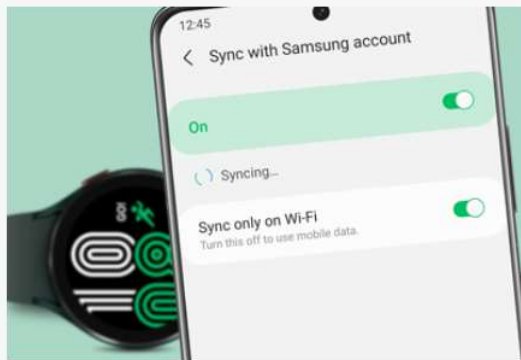

Samsung Health data does not sync

If your Samsung Health data isn't syncing automatically between your watch and phone, you should check your network connection and make sure the app is updated. If your watch was set up without a phone, then your most recent activity is stored only on the watch and you will not be able to view it on your phone.

(<https://www.samsung.com/us/support/troubleshooting/TSG01003270/>)

1 Sync your health data after each step.

After performing each of the following steps, try syncing your Samsung Health data between your phone and watch.

1. Open the **Samsung Health** app on your phone.
2. Tap **More options** (the three vertical dots), and then tap **Settings**.
3. Tap **Sync with Samsung Cloud**, and then tap the **switch** at the top to turn it on.
4. Tap **Sync now**.

(<https://www.samsung.com/us/support/troubleshooting/TSG01003270/>)

Measuring your blood oxygen level manually

- 1 Tap the Health icon () on the Apps screen.
- 2 Tap **Blood oxygen**.
- 3 Tap **Measure** to begin measuring your blood oxygen level.

(https://downloadcenter.samsung.com/content/UM/202507/20250718174111308/SM-L32X_L33X_L50X_UG_EU_Android_Eng_Rev.1.1_250718.pdf)

DAILY ACTIVITY

Stay motivated with daily goals

Automatically measure **steps**, **active calories** and **activity time** with easy-to-read heart trackers. Set your daily goals, get notifications to stay motivated and complete each heart with satisfaction in every step.




(https://www.samsung.com/us/watches/galaxy-watch8/?gad_source=1&gad_campaignid=22026468931&gclid=CjwKCAiAlfvIBhA6EiwAcErpyTxQourKcXdoNy-zISVqjbmXfm-x9LWFiON1OTVnDiFXZD5sc3cUaBoCwsgQAvD_BwE&gclsrc=aw.ds)

Discover your optimal bedtime

BEDTIME GUIDANCE

Galaxy Watch8 uses three days of sleep data to find an optimal bedtime for you.⁴ When it's time to wind down, it gently nudges you according to your personalized sleep schedule.

🕒 How to use Sleep Coaching

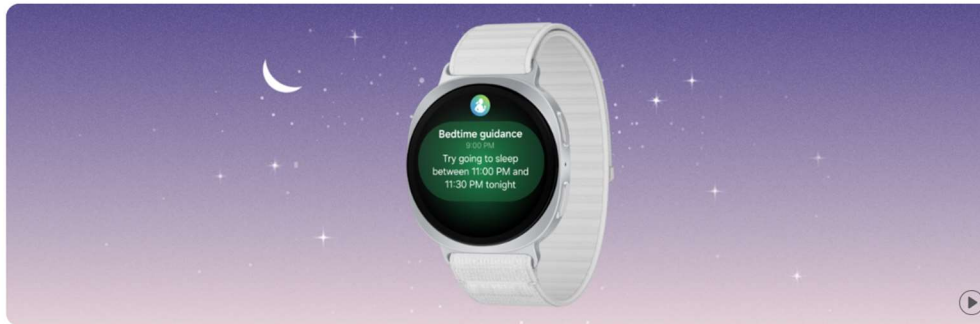

ADVANCED SLEEP TRACKING

Track your nights. Own your days.




ADVANCED SLEEP COACHING

Your coach, day and night



SLEEP APNEA

Detect moderate to severe sleep apnea

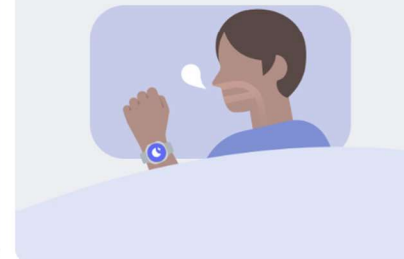

(https://www.samsung.com/us/watches/galaxy-watch8/?gad_source=1&gad_campaignid=22026468931&gclid=CjwKCAiAlfvIBhA6EiwAcErpyTxQourKcXdoNy-zISVqjbmXfm-x9LWFiON1OTVnDiFXZD5sc3cUaBoCwsgQAvD_BwE&gclsrc=aw.ds)

How can I improve my sleep quality?

[Galaxy Watch8](#) tracks every toss, turn and breath of your night. Each morning you get an in-depth sleep analysis based on your sleep stages, heart rate, skin temperature and oxygen level, highlighting what helped or hindered your rest.

You can also access a **Sleep Environment Report**³ which leverages data from compatible SmartThings devices to analyze room temperature, humidity, carbon dioxide and light levels. With this data at your fingertips, you can easily optimize your room conditions for a better night's sleep.

What can I do during the day to improve my sleep?

Once your sleep patterns are defined, **Sleep Coaching**⁴ assigns you a Sleep Animal and delivers personalized tips like adding a quick meditation session or skipping late-day caffeine. With [Galaxy Watch8](#), small, daily habit upgrades are easy, and better nights are within reach.

(<https://news.samsung.com/us/why-samsung-galaxy-watch8-series-is-every-biohacker-new-go-to-tech/>)

About the Galaxy Ring

The Galaxy Ring (hereafter referred to as the Ring) is a smart ring that can help you precisely analyse your activity patterns or sleep quality and manage your health by continuously measuring your biometric signals.

You can use your Ring after connecting it to your phone. The measured data will be regularly synced with the Samsung Health app of the connected phone.

(https://downloadcenter.samsung.com/content/UM/202505/20250508105256703/SM-Q50X_Q51X_UG_EU_Eng_Rev.1.3_250425.pdf)

Sensors

Accelerometer

Yes

PPG

2PD + 3LED (R / 2xG / IR)

Skin temperature

NTC-Temperature Sensor


(<https://www.samsung.com/us/rings/galaxy-ring/buy/>)

Activity and Stress Monitor


Activity Monitor

With the Galaxy Ring, after continuously exercising for a certain period, it automatically recognises the activity and starts recording. Your ring collects activity diagnostics such as steps, exercise time, and exercise and total calories burned. All diagnostics can be viewed using the Samsung Health app.

- Set up auto detect:

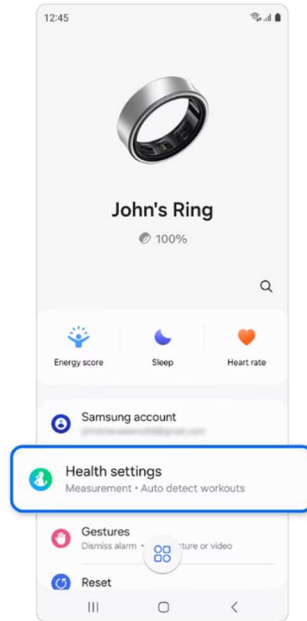

Step 1. Open the Galaxy Wearable app > Tap Health Settings.

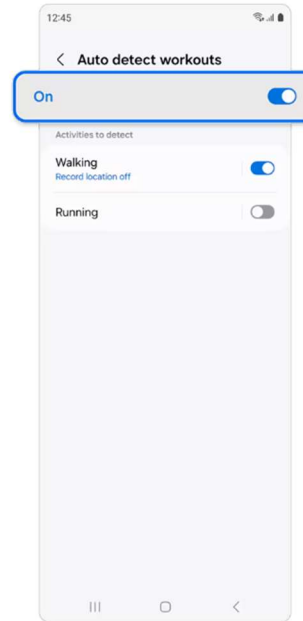


Step 2. Tap Activities to detect > Turn switch On and specify activities that you'd like to auto detect.

(<https://www.samsung.com/ie/support/mobile-devices/how-to-use-the-samsung-galaxy-ring/>)

Sleep


Your Ring analyses your sleep by measuring your heart rate, blood oxygen, skin temperature, and more while you are sleeping.

- Check diagnostics:

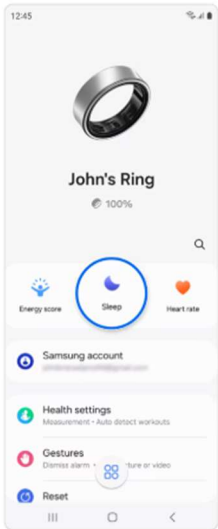

Step 1. Open the Galaxy Wearable app > Tap Sleep > Check all information related to your measured sleep on the screen.

- Sleep measurement settings:

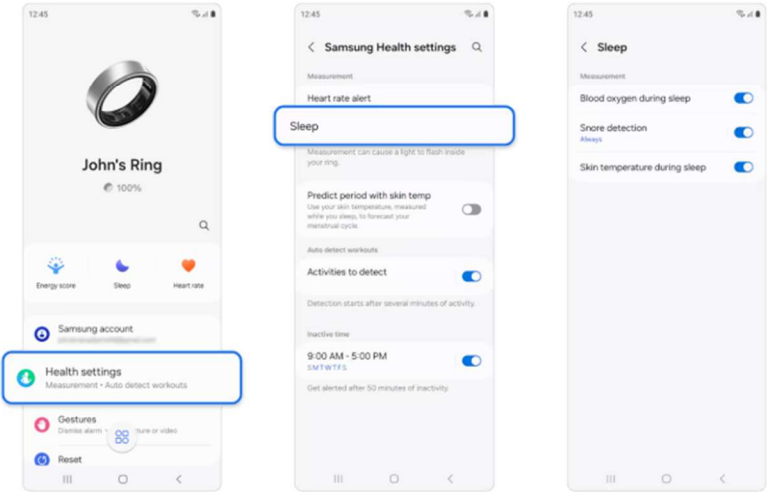


Step 1. Open the Galaxy Wearable app > Tap Health settings.

Step 2. Tap Sleep.

Step 3. Toggle with measurement settings to your preference.

(<https://www.samsung.com/ie/support/mobile-devices/how-to-use-the-samsung-galaxy-ring/>)

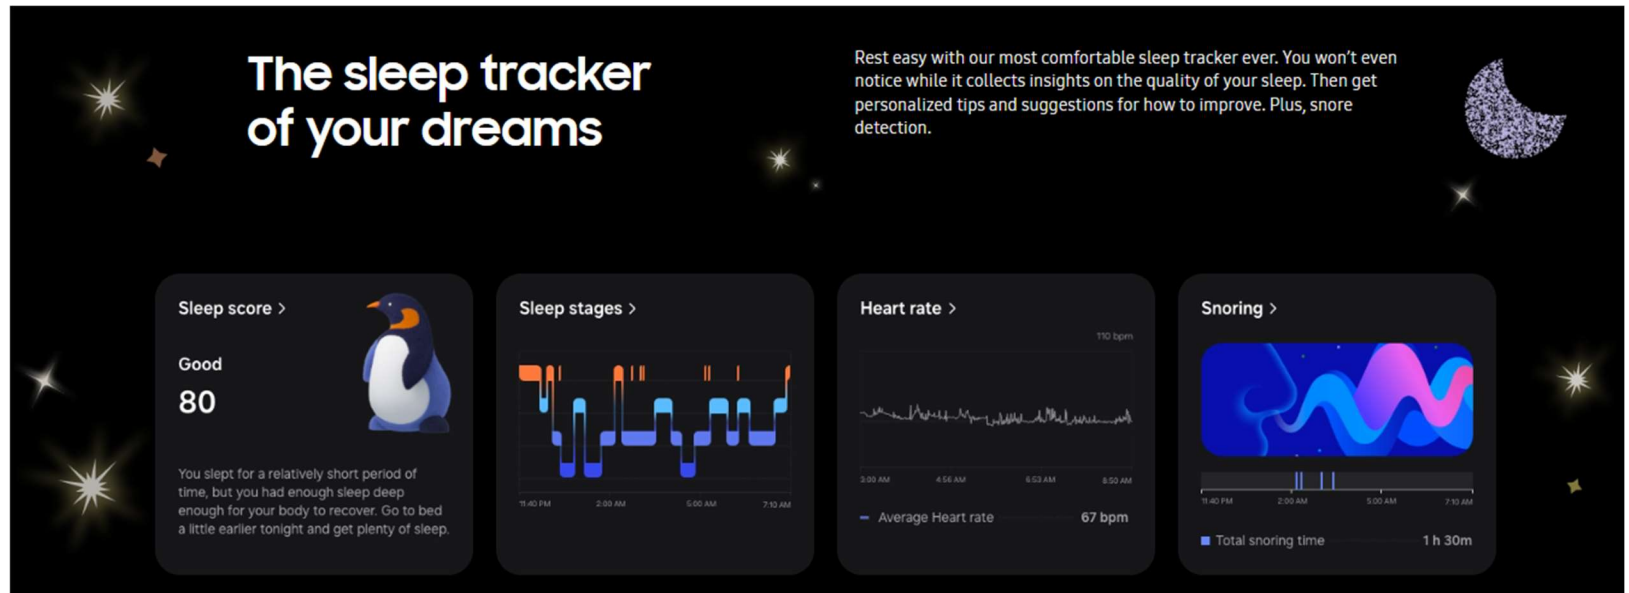

(<https://www.samsung.com/us/rings/galaxy-ring/>)

Galaxy Ring auto-tracks your walks and runs

Simply place it on your finger and Galaxy Ring will take care of the rest. Galaxy Ring **auto-tracks** your walks and runs without having to press any start buttons. Check calories burned and other stats on the Samsung Health app to keep track of your progress. ^{7,22}

Today



Time to get moving!

It's been almost an hour. Try some stretches or a walk




Running (auto)
5.84 km

40:29
7:31 AM




Walking (auto)
2.3 km

31:48
10:22 AM

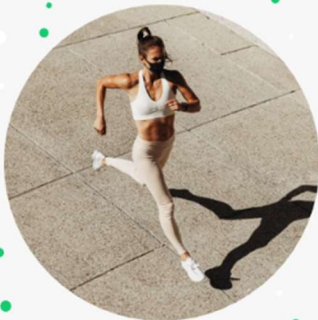

Trends



Details

Distance	Avg. speed
5.34km	9.5 km/h
Calories	Avg. pace
512 kcal	06'15" km
Avg. heart rate	Avg. cadence
119 bpm	168 spm

Achievement



(https://www.samsung.com/my/rings/galaxy-ring/galaxy-ring-titanium-gold-size-15-sm-q515nzdaxme/?srsltid=AfmBOoqGJ7KWT08760XUvDmnRUwstq-KSkZpwfdk2IWiwBzJ7Qi_1u-l)

1[c][iii] perform the specified function using a

The Domestic Industry Products perform the specified function using a select portion of the biological signal obtained during a select period, of the movement signal, determined to correspond to a specified condition. For example, the Domestic Industry Products perform the specified function using a select portion of the biological signal, such as blood oxygen (SpO₂)

select portion of the biological signal obtained during a select period, of the movement signal, determined to correspond to a specified condition.

levels and/or heart rate, obtained during a select period (e.g., the period when the user is determined to be asleep), of the movement signal, determined to correspond to a specified condition, such as the user sleeping or a movement signal indicative of the user sleeping.

Galaxy Watch8

Galaxy Watch8 | 44mm | Graphite | Sport | Graphite | Medium/Large | 4G LTE + Bluetooth / Wifi | Wifi

Sensors

Sensors

Accelerometer, Barometer, Bioelectrical Impedance
Analysis Sensor, Electrical Heart Sensor, Gyro Sensor,
Geomagnetic Sensor, Infrared Temperature Sensor, Light
Sensor, Optical Heart Rate Sensor

(<https://www.samsung.com/us/watches/galaxy-watch8/buy/galaxy-watch8-44mm-graphite-lte-sku-sm-l335udaaxaa/>)

Galaxy Watch8

Galaxy Watch8 | 44mm | Graphite | Sport | Graphite | Medium/Large | 4G LTE + Bluetooth / Wifi | Wifi

Memory (GB)	Storage (GB)	Available Storage (GB)
2	32	20.5


(<https://www.samsung.com/us/watches/galaxy-watch8/buy/galaxy-watch8-44mm-graphite-lte-sku-sm-l335udaaxaa/>)

Samsung Health

Introduction

Samsung Health records and manages your 24-hour activity and sleep pattern to cultivate a healthy habit. You can save and manage health-related data on the Samsung Health app of the connected phone.

(https://downloadcenter.samsung.com/content/UM/202405/20240516131658596/SM-R93X_R94X_R95X_R96X_UM_EU_Android_Eng_Rev.1.2_240430.pdf)

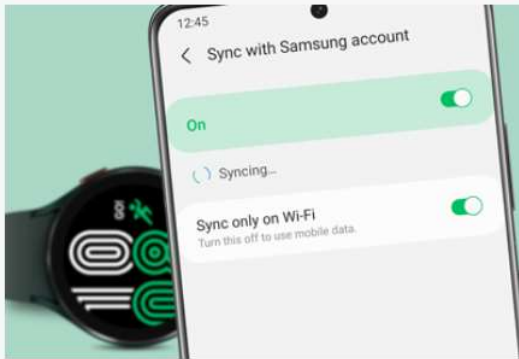

Samsung Health data does not sync

If your Samsung Health data isn't syncing automatically between your watch and phone, you should check your network connection and make sure the app is updated. If your watch was set up without a phone, then your most recent activity is stored only on the watch and you will not be able to view it on your phone.

(<https://www.samsung.com/us/support/troubleshooting/TSG01003270/>)

1 Sync your health data after each step.

After performing each of the following steps, try syncing your Samsung Health data between your phone and watch.

1. Open the **Samsung Health** app on your phone.
2. Tap **More options** (the three vertical dots), and then tap **Settings**.
3. Tap **Sync with Samsung Cloud**, and then tap the **switch** at the top to turn it on.
4. Tap **Sync now**.

[\(https://www.samsung.com/us/support/troubleshooting/TSG01003270/\)](https://www.samsung.com/us/support/troubleshooting/TSG01003270/)

Measuring your blood oxygen level manually

- 1 Tap the Health icon () on the Apps screen.
- 2 Tap **Blood oxygen**.
- 3 Tap **Measure** to begin measuring your blood oxygen level.

https://downloadcenter.samsung.com/content/UM/202507/20250718174111308/SM-L32X_L33X_L50X_UG_EU_Android_Eng_Rev.1.1_250718.pdf

Measuring your heart rate manually

- 1 Tap the Health icon () on the Apps screen.
- 2 Tap **Heart rate**.
- 3 Tap **Measure** to begin measuring your heart rate.
- 4 Check the measured heart rate on the screen.
To check additional information which is related to the heart rate, use the bezel or swipe upwards or downwards on the screen.

Changing the heart rate measurement settings

- 1 Tap the Health icon () on the Apps screen.
- 2 Tap **Heart rate**.
- 3 Tap **Settings** and select the measurement method under **Measurement**.
 - **Measure continuously**: Your heart rate will be measured continuously.
 - **Every 10 mins**: Your heart rate will be measured every 10 minutes while resting.
 - **Manual only**: Your heart rate will be measured manually only when tapping **Measure**.

(https://downloadcenter.samsung.com/content/UM/202507/20250718174111308/SM-L32X_L33X_L50X_UG_EU_Android_Eng_Rev.1.1_250718.pdf)

Samsung Health Monitor

Introduction

You can measure biometric data, such as your blood pressure or ECG, whenever you want to with the Samsung Health Monitor of your Watch that includes both the optical bio-signal sensor and electrical bio-signal sensor. You can check the measurement history using the Samsung Health Monitor app on your connected phone since your Watch and phone have been synced automatically.

Manage your health more systemically with your physician based on your measurement results.



- If you have not installed the Samsung Health Monitor app on your connected phone, open the **Samsung Health Monitor** app on your Watch and follow the on-screen instructions to download it on the phone.
- The Samsung Health Monitor app is only supported on Samsung phones.
- Individuals under the age of 22 cannot use the Samsung Health Monitor app to measure your biometric data.
- This app may not be available depending on the region.

https://downloadcenter.samsung.com/content/UM/202507/20250718174111308/SM-L32X_L33X_L50X_UG_EU_Android_Eng_Rev.1.1_250718.pdf

Measuring your blood oxygen level manually


- 1 Tap the Health icon () on the Apps screen.
- 2 Tap **Blood oxygen**.
- 3 Tap **Measure** to begin measuring your blood oxygen level.

(https://downloadcenter.samsung.com/content/UM/202507/20250718174111308/SM-L32X_L33X_L50X_UG_EU_Android_Eng_Rev.1.1_250718.pdf)

DAILY ACTIVITY

Stay motivated with daily goals

Automatically measure **steps**, **active calories** and **activity time** with easy-to-read heart trackers. Set your daily goals, get notifications to stay motivated and complete each heart with satisfaction in every step.

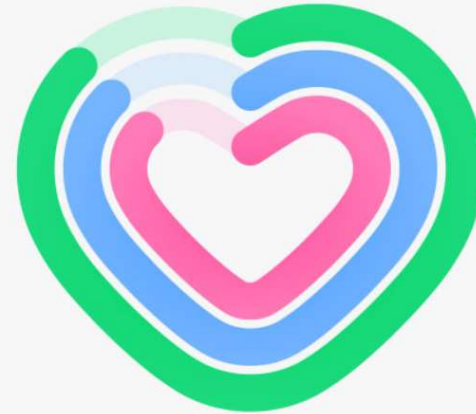


(https://www.samsung.com/us/watches/galaxy-watch8/?gad_source=1&gad_campaignid=22026468931&gclid=CjwKCAiAlfvIBhA6EiwAcErpyTxQourKcXdoNy-zISVqjbmXfm-x9LWFiON1OTVnDiFXZD5sc3cUaBoCwsgQAvD_BwE&gclsrc=aw.ds)

Discover your optimal bedtime

BEDTIME GUIDANCE

Galaxy Watch8 uses three days of sleep data to find an optimal bedtime for you.⁴ When it's time to wind down, it gently nudges you according to your personalized sleep schedule.

🕒 How to use Sleep Coaching

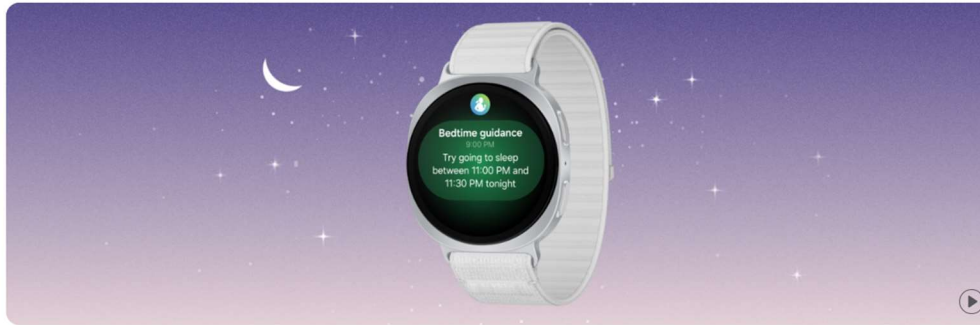

ADVANCED SLEEP TRACKING

Track your nights. Own your days.




ADVANCED SLEEP COACHING

Your coach, day and night



SLEEP APNEA

Detect moderate to severe sleep apnea

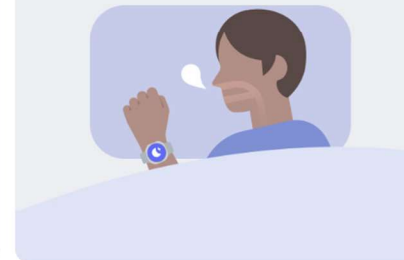

(https://www.samsung.com/us/watches/galaxy-watch8/?gad_source=1&gad_campaignid=22026468931&gclid=CjwKCAiAlfvIBhA6EiwAcErpyTxQourKcXdoNy-zISVqjbmXfm-x9LWFiON1OTVnDiFXZD5sc3cUaBoCwsgQAvD_BwE&gclsrc=aw.ds)

How can I improve my sleep quality?

[Galaxy Watch8](#) tracks every toss, turn and breath of your night. Each morning you get an in-depth sleep analysis based on your sleep stages, heart rate, skin temperature and oxygen level, highlighting what helped or hindered your rest. You can also access a **Sleep Environment Report**³ which leverages data from compatible SmartThings devices to analyze room temperature, humidity, carbon dioxide and light levels. With this data at your fingertips, you can easily optimize your room conditions for a better night's sleep.

What can I do during the day to improve my sleep?

Once your sleep patterns are defined, **Sleep Coaching**⁴ assigns you a Sleep Animal and delivers personalized tips like adding a quick meditation session or skipping late-day caffeine. With [Galaxy Watch8](#), small, daily habit upgrades are easy, and better nights are within reach.

[\(https://news.samsung.com/us/why-samsung-galaxy-watch8-series-is-every-biohacker-new-go-to-tech/\)](https://news.samsung.com/us/why-samsung-galaxy-watch8-series-is-every-biohacker-new-go-to-tech/)

About the Galaxy Ring

The Galaxy Ring (hereafter referred to as the Ring) is a smart ring that can help you precisely analyse your activity patterns or sleep quality and manage your health by continuously measuring your biometric signals.

You can use your Ring after connecting it to your phone. The measured data will be regularly synced with the Samsung Health app of the connected phone.

(https://downloadcenter.samsung.com/content/UM/202505/20250508105256703/SM-Q50X_Q51X_UG_EU_Eng_Rev.1.3_250425.pdf)

Sensors

Accelerometer

Yes

PPG

2PD + 3LED (R / 2xG / IR)

Skin temperature

NTC-Temperature Sensor


(<https://www.samsung.com/us/rings/galaxy-ring/buy/>)

Activity and Stress Monitor


Activity Monitor

With the Galaxy Ring, after continuously exercising for a certain period, it automatically recognises the activity and starts recording. Your ring collects activity diagnostics such as steps, exercise time, and exercise and total calories burned. All diagnostics can be viewed using the Samsung Health app.

- Set up auto detect:

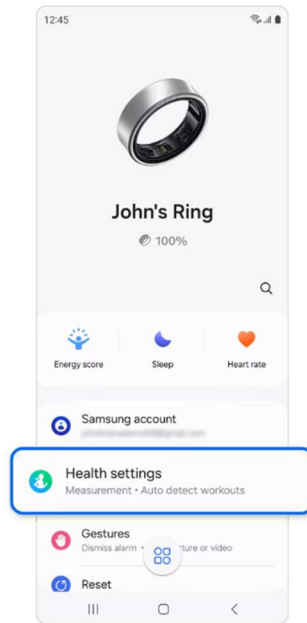

Step 1. Open the Galaxy Wearable app > Tap Health Settings.

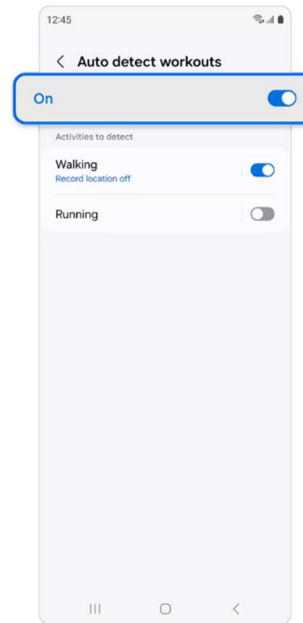


Step 2. Tap Activities to detect > Turn switch On and specify activities that you'd like to auto detect.

(<https://www.samsung.com/ie/support/mobile-devices/how-to-use-the-samsung-galaxy-ring/>)

Sleep


Your Ring analyses your sleep by measuring your heart rate, blood oxygen, skin temperature, and more while you are sleeping.

- Check diagnostics:

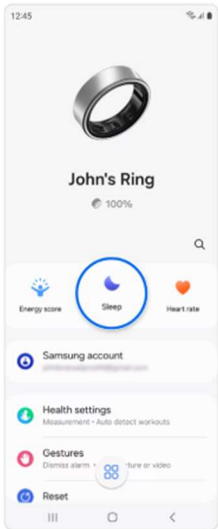

Step 1. Open the Galaxy Wearable app > Tap Sleep > Check all information related to your measured sleep on the screen.

- Sleep measurement settings:

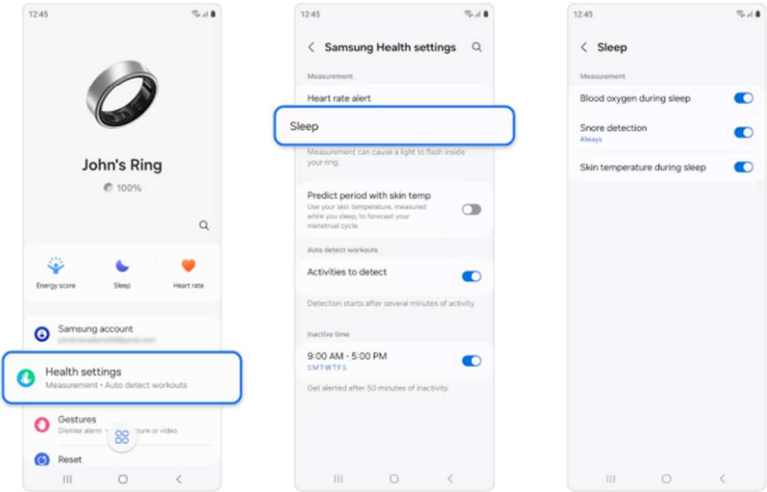


Step 1. Open the Galaxy Wearable app > Tap Health settings.

Step 2. Tap Sleep.

Step 3. Toggle with measurement settings to your preference.

(<https://www.samsung.com/ie/support/mobile-devices/how-to-use-the-samsung-galaxy-ring/>)

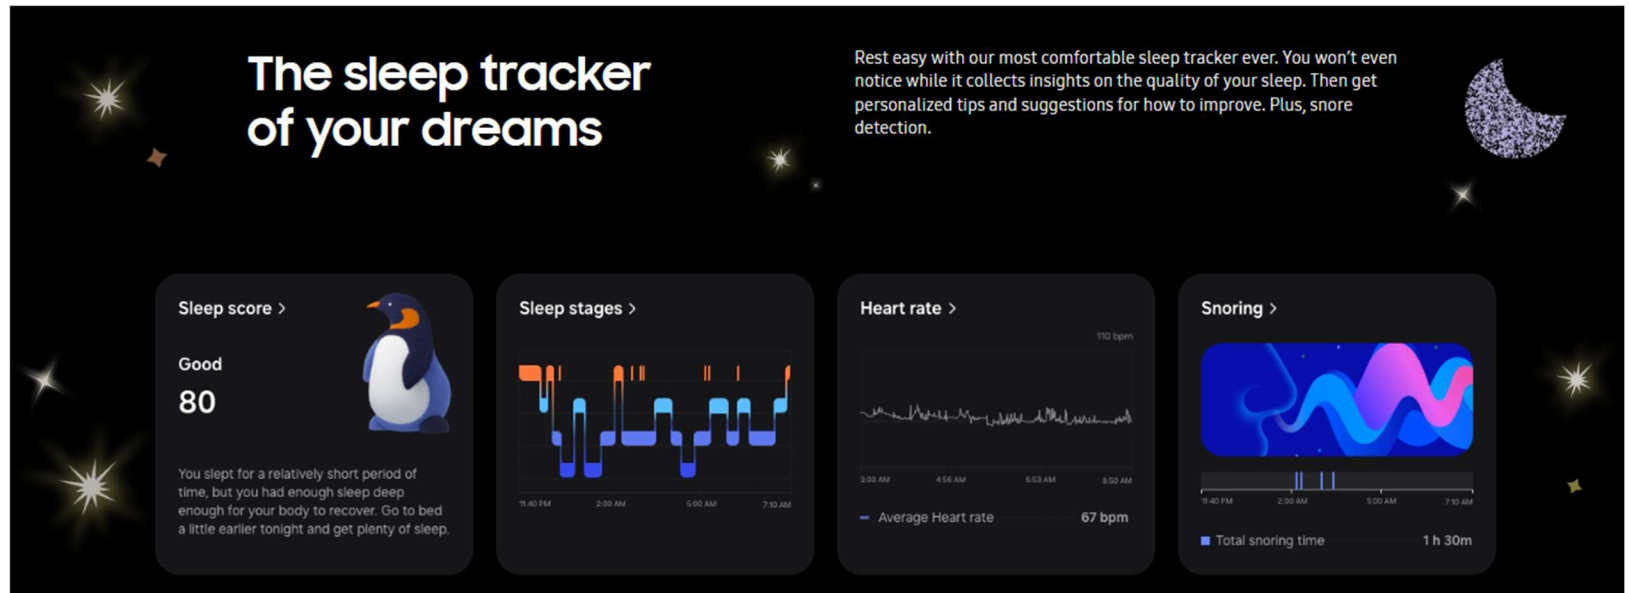

(<https://www.samsung.com/us/rings/galaxy-ring/>)

Galaxy Ring auto-tracks your walks and runs

Simply place it on your finger and Galaxy Ring will take care of the rest. Galaxy Ring **auto-tracks** your walks and runs without having to press any start buttons. Check calories burned and other stats on the Samsung Health app to keep track of your progress. ^{7,22}

Today



Time to get moving!

It's been almost an hour. Try some stretches or a walk




Running (auto)
5.84 km

40:29
7:31 AM




Walking (auto)
2.3 km

31:48
10:22 AM

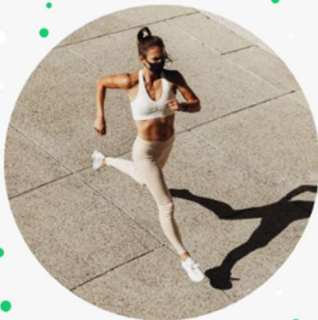

Trends



Details

Distance	Avg. speed
5.34km	9.5 km/h
Calories	Avg. pace
512 kcal	06'15" km
Avg. heart rate	Avg. cadence
119 bpm	168 spm

Achievement



10,000 steps!

(https://www.samsung.com/my/rings/galaxy-ring/galaxy-ring-titanium-gold-size-15-sm-q515nzdaxme/?srsltid=AfmBOoqGJ7KWTo8760XUvDmnRUwstq-KSkZpwfdk2IWiwBzJ7Qi_1u-l)